


SERVICE MANUAL

AEP Model Chassis No. SCC-B14Y-A

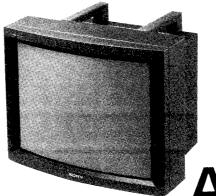

AE-1 chassis

MODELS OF	THE SAME SEF	RIES
KX-2910		

Specifications

Colour system

PAL, SECAM, NESC4.43 and NTSC3.58

systems

Picture tube

Inputs

Trinitron tube

Approx. 7.24 cm (29 inches) Approx. 68 cm (picture measured

diagonally), 110-degree deflection

1: 21-pin connector, CENELEC standard

2: 21-pin connector, CENELEC standard

Video: BNC connectoe (1) Audio: phone jack (2)

(\$4 S:

S video: 4-pin mini-DIN Y; 1 Vp-p+3 dB, 75 ohms C; 0.3 Vp-p+3 dB, 75 ohms

Audio: phono jack (2)

: minijack

Output

→ : phono jack (2)

🕞 2 (loop-through output): 21-pin

CENELEC standard

: 2-pin DIN

8 ohms (15W+15W) MUSIC POWER

Headphone jack: stereo minijack

Power requirements

240V, 50 Hz 215W max.

Power consumption

Dimensions Weight

Approx. $666 \times 532 \times 526.5 \text{ mm (w/h/d)}$

52 kg

Supplied accessories

Video connecting cord (BNC-BNC) (1)

Audio connecting cord (2 phono-2 phono) (1) BNC-phono adaptor plug (1)

Design and specifications subject to change without notice.





TABLE OF CONTENTS

Section	on <u>Title</u>	Page	Secti	<u>on</u>	<u>Title</u>	Page
1. (GENERAL		4. (CIRCUIT ADJUS	TMENTS	
1-1.	Features ····	3	4-1.	B Board Adjustmen	nts ·····	14
1-2.	Location and Function of Parts and Controls	3	4-2.		nts	
			4-3.	J1 Board Adjustme	nts ·····	16
2. I	DISASSEMBLY					
			5. I	DIAGRAMS		
2-1.	Rear Cover Removal ······					
2-2.	Chassis Assy Removal ······	6	5-1.	Block Diagram ····	••••••	17
2-3.	D1, F1, Boards Removal and J1 Board Opening		5-2.	Circuit Boards Loc	ation ·····	21
2-4.	B, KS Boards Removal ·····		5-3.	Schematic Diagram	is and Printed Wiring Boa	ards 25
2-5.	Picture Tube Removal ·····		5-4.			
2-6.	Service Position ·····	9				
			6. I	EXPLODED VIEW	v s	
3. \$	SET-UP ADJUSTMENTS					
			6-1.	Chassis ·····	•••••	38
3-1.	Beam Landing	10	6-2.	Picture Tube ······	•••••	39
3-2.	Convergence					
3-3.	Focus ·····	12				
3-4.	White Balance	13	7. I	ELECTRICAL PA	RTS LIST	40

WARNING !!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.
THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING!

COMPONENTS IDENTIFIED BY SHADING AND MARK


ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 **GENERAL**

1-1. FEATURES

- · New Microblack Trinitron picture tube for high resolution and high contrast picture
- S video input connector through which Y (luminance) and C (chrominance) signals can be input separately. This reduces interference between the two signals and ensures excellent picture quality.
- · Four colour systems, PAL, SECAM, NTSC 4.43 and NTSC 3.58 can be received.
- 21-pin connectors allow direct hook-up to video equipment. One of them allows connection of a microcomputer with analog RGB output.
- · BNC-type video input connector allows connection of video equipment with BNC-type video connector.

1-2. LOCATION AND FUNCTION OF PARTS AND CONTROLS

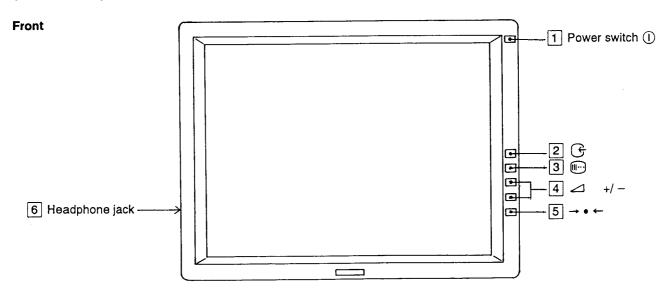

1 Power switch

Press to turn on the monitor. Press again to turn it off.

2 (F (input mode select) button

Press to select the input source to be monitored. Each press changes the input mode indication displayed at the top of the screen as follows:

 $\bigcirc 1 \text{ (AV1)} \rightarrow \bigcirc (RGB) \rightarrow \bigcirc 2 \text{ (AV2)} \rightarrow \bigcirc (Y/C) \rightarrow \bigcirc 3 \text{ (AV3)}$

- G 1: Video (21-pin through **(**₽ 1 signal fed connector) will be monitored.
- through (21-pin 子: RGB signal fed connector) will be monitored.
- € 2: Video signal fed through $\bigoplus 2$ (21-pin connector) will be monitored.
- (4-pin mini-DIN connector) will be monitored.
- signal fed through 🕞 3 connector) will be monitored on the screen.
- · The last selected input mode will be memorized after the unit is turned off.

(picture and sound adjustment select) 3 G button*

Press repeatedly until the picture or sound adjustment item to be adjusted appears on the screen.

Each press changes the item in the following order:

- (volume), (picture contrast),
- (colour intensity), ∠ ¿ (hue), 3 ✡
 - (brightness), [(sharpness), γ : (bass),
- (treble), △ ∠ (balance)

The item will disappear unless the button is pressed for about 3 seconds in selecting mode.

This button is also used to select the NTSC 3.58 colour system manually.

The unit automatically selects the available colour system, but if the colour does not appear correctly while watching NTSC 3.58 video input pictures, select this system manually.

- 1 Keep pressed for about 3 seconds. The present input mode and colour system "AUTO" appear on the screen.
- 2 Press em while the indications are displayed. The colour system indication will change to NTSC 3.58.

> Press to adjust the selected item while the item is displayed on the screen. The segmented bar display shows the adjustment level.

Adjustments

: Press + for higher volume and - for lower volume.

The volume level can be adjusted only by pressing +/ — without selecting this item while other adjustment item is not displayed on the screen.

Press + for more colour intensity and — for less colour intensity.

Press + for more picture contrast and — for less picture contrast.

Press + to make skin tones more purplish and — to make them more greenish.

This adjustment functions only for NTSC 4.43 and NTSC 3.58 colour systems.

: Press + to make picture brighter and — to make it darker.

☐ : Press + to make picture sharper and — to make it softer.

The sharpness adjustment does not function for RGB input pictures.


?: Press + to increase bass response and - to decrease it.

\$: Press + to increase treble response and — to decrease it.

□ < : Press + to emphasize the right speaker's volume and - to emphasize the left speaker's volume.

5 →← (reset) button

Press to reset all picture and sound adjustments to the factory-set levels. Rear

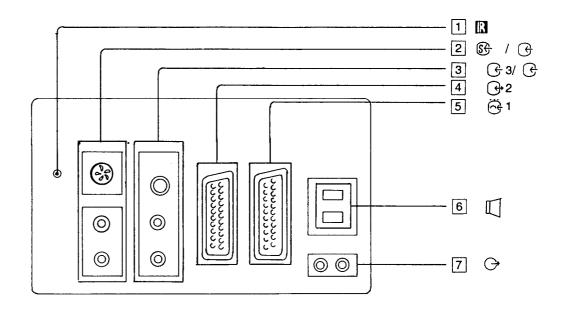


- (control S input) connector(minijack)
 Connect to the control S output of video equipment.
 The monitor can be remotely controlled through the connected equipment.
- (Syldeo Input) connector (4-pin mini-DIN)
 L/G/S, R/D/D (audio input) jacks (phono jack)
 Connect to the S video/audio outputs of video equipment with the S video output connector.
- 3 (Video input) connector (BNC type)
 L/G/S, R/D/D (audio input) jacks (phono jack)
 Connect to the video/audio outputs of video equipment with the BNC-type video connector.
- Q (AV Input/output) connector (21-pin CENELEC standard)
 Connect to the 21-pin multiconnector of video equipment.
 For a loop-through connection, connect to the 1 connector of another monitor.
 This connector cannot be used to connect a microcomputer.


- 5 (AV/RGB input) connector
 (21-pin CENELEC standard)
 Connect to the 21-pin multiconnector of video equipment or to the analog RGB multioutput of a microcomputer.
- 6 L/G/S, R/D/D (speaker L/R) terminals
 Connect to the optional external speakers with 8 ohm or less impedance.
- 7 L/G/S, R/D/D (audio output) Jacks (phono jack)
 Connect to the line input jacks of an audio system to monitor the sound through the audio system. The volume is adjusted with on this monitor.

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

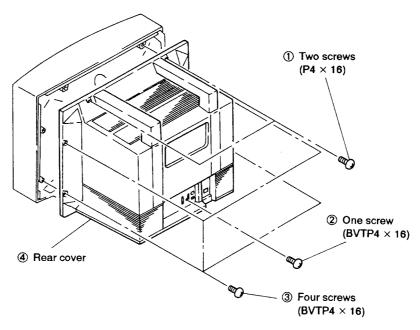


2-2. CHASSIS ASSY REMOVAL

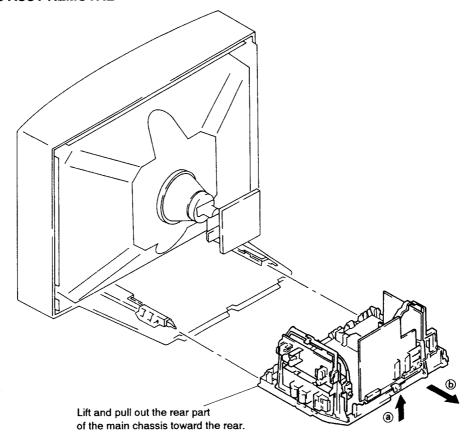


2-3. D1, F1 BOARDS REMOVAL AND J1 BOARD OPENING

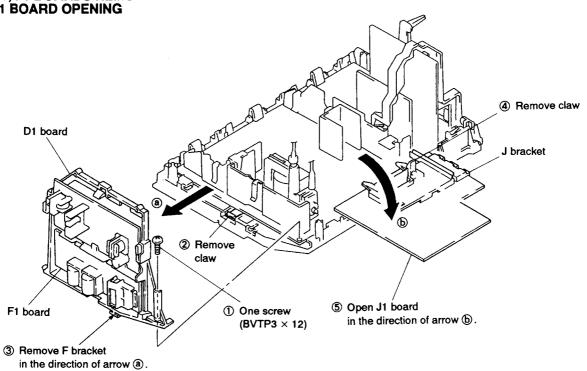

2-4. B, KS BOARDS REMOVAL

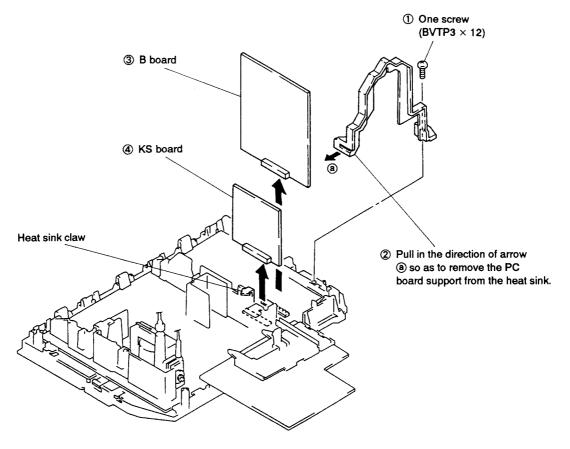


2-5. PICTURE TUBE REMOVAL

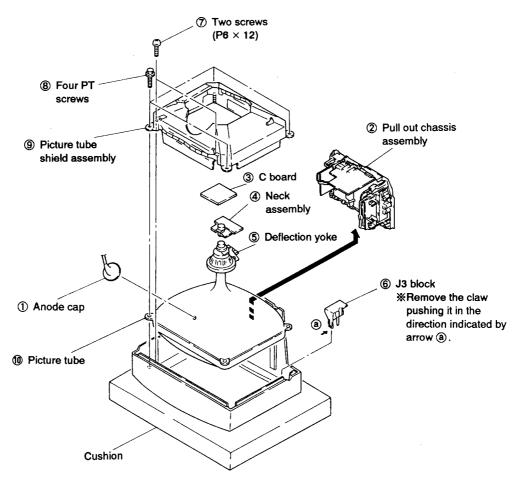


• REMOVAL OF ANODE-CAP


REMOVING PROCEDURES

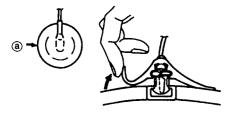

① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.

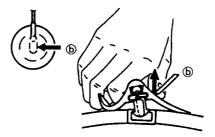


② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⑥.

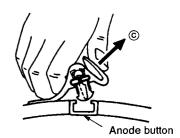


③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ⑥.


• HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps!
 A metal fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly! The shatter-hook terminal will stick out or hurt the rubber.

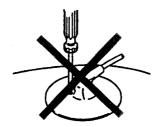

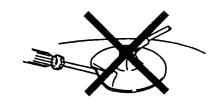

2-6. SERVICE POSITION

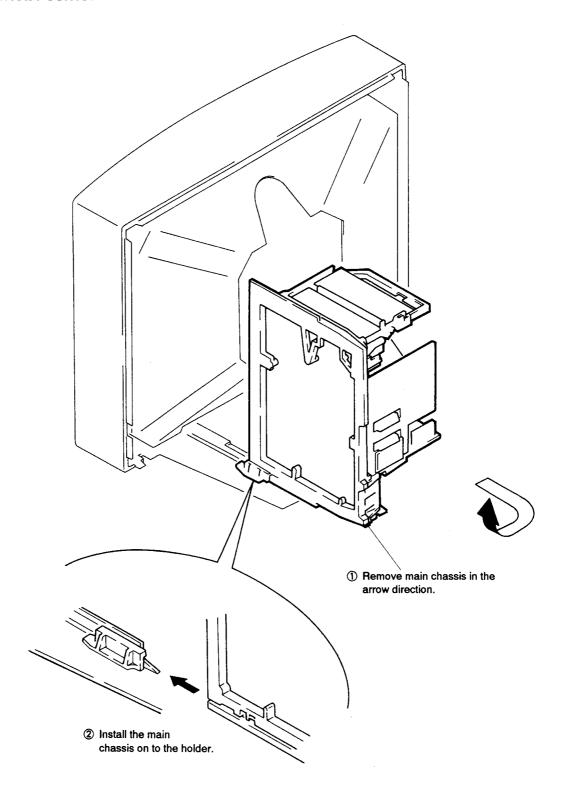

SECTION 3 SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

The control and switch below should be set as follows unless otherwise noted:

◆ CONTRAST control ······ 80% (or Normal by Commander)

ØBRIGHTNESS control ····· 50%

Perform the adjustments in order as follows:

- 1. Beam Landing
- 2. Convergence
- 3. Focus
- 4. White Balance

Note: Test Equipment Required.

- 1. Color Bar Pattern Generator
- 2. Degausser
- 3. DC Power Supply
- 4. Digital multimeter
- 5. Oscilloscope

Preparation

- Set the side of the unit with the PICTURE TUBE so that it faces east or west in order to reduce the influence of external magnetic force.
- Turn the power switch for the unit ON and erase the magnetic force using a degausser.

3-1. BEAM LANDING

- 1. Position neck ass'y as shown in Fig. 3-1
- 2. Input a raster signal with the pattern generator.

 CONTRAST normal

 BRIGHTNESS normal
- Turn the raster signal of the pattern generator to red.
- 4. Move the deflection yoke backward, and adjust with the purity control so that red is in the center and blue and green are at the sides, evenly. (Fig. 3-2 to 3-4)
- 5. Move the deflection yoke forward, and adjust so that the entire screen becomes red. (Fig. 3-2)
- 6. Switch over the raster signal to blue and green and confirm the condition.
- 7. When the position of the deflection yoke is determined, tighten it with a deflection yoke mounting screw.
- 8. When landing at the corners is not right, adjust by using the magnet. (Fig. 3-5)




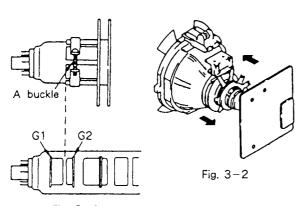


Fig. 3-1

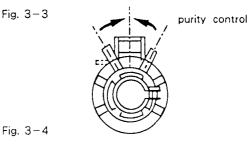

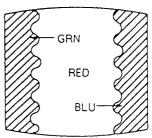

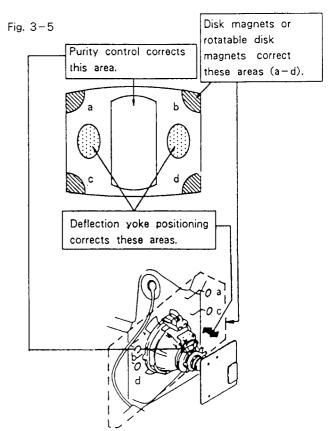


3-2. CONVERGENCE


Preparation:

- Before starting, perform FOCUS, H. SIZE and V. SIZE adjustments.
- · Set BRIGHTNESS control to minimum.
- · Feed in the dot pattern.


(1) Horizontal and Vertical Static Convergence

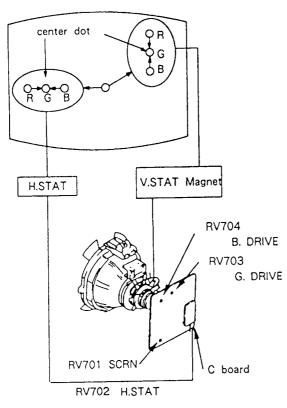



- Adjust H. STAT VR to coincide red, green and blue dots on the center of screen. (Horizontal movement)
- Adjust V. STAT magnet to coincide red, green and blue dots on the center of screen. (Vertical movement)
- 3. If the red, green and blue dots do not coincide on the center of screen with H. STAT VR, perform horizontal convergence adjustment using H. STAT VR and V. STAT magnet as shown below. (In this case, H. STAT VR and V. STAT magnet effect each other.)
- Tilt the V. STAT magnet and adjust static convergence to open or close the V. STAT magnet.

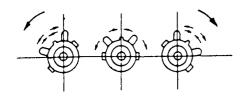


4. When the V. STAT magnet is moved in the direction of arrow (a) and (b), red, green and blue dots move as shown below.

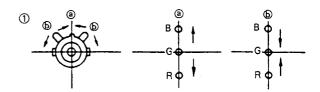

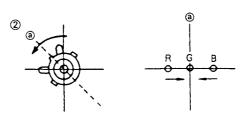

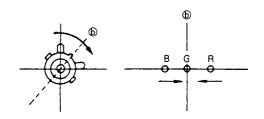

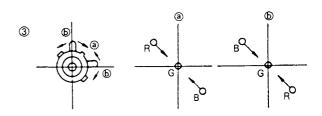


If the red and blue dots do not coincide with green dot, perform following steps.

Move BMC magnet (a) to correct insufficient H. static convergence.

Rotate BMC magnet (b) to correct insufficient V. static convergence.

In either case, repeat Beam Landing Adjustment.

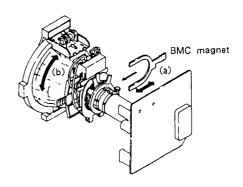


(2) Dynamic Convergence Adjustment

Preparation:

- Before starting, perform Horizontal and Vertical Static Convergence Adjustment.
- 1. Slightly loosen deflection yoke screw.
- 2. Remove deflection yoke spacers.

- Move the deflection yoke for best convergence as shown below.
- 4. Tighten the deflection yoke screw.
- 5. Install the deflection yoke spacers.

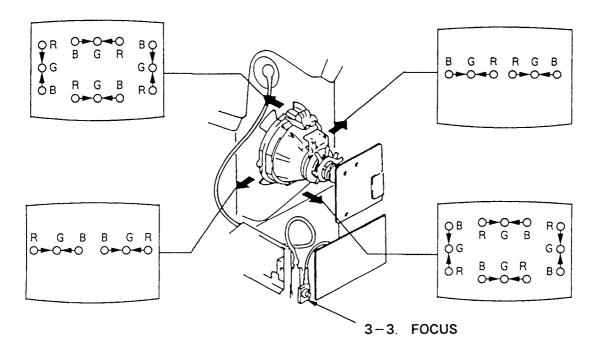

Adjust FOCUS so that the whole screen is in best focus.

Affix a permalloy ass'y corresponding to the misconverged areas. a - d: screen-corner misconvergence c d Permalloy

3-4. WHITE BALANCE

(Screen (G2) Setting)

- 1. Input dot signals from the pattern generator.
- 2. Set the picture BRIGHTNESS control to the minimum level.
- Apply 170 V dc to the cathodes of R, G, and B from an external power source.
- 4. While watching the picture, adjust the G2 volume (RV701) immediately before the fly-back line disappears.


(White Balance Adjustment)

- 1. Input all-white signals from the pattern generator.
- 2. Adjust the BRIGHTNESS and COLOR controls to the standard level.
- 3. Adjust the white balance using RV704 (B DRIVE) and RV703 (G DRIVE).

In the following adjustments, the CONTRAST COLOR and BRIGHTNESS controls are set to normal unless otherwise specified.

SECTION 4 CIRCUIT ADJUSTMENTS

4-1. B BOARD ADJUSTMENTS

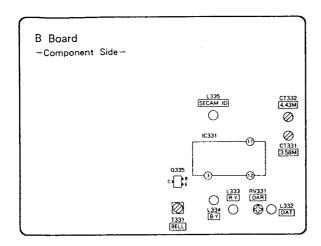

REF OSC 3.58 MHz Adjustment (CT331)


- 1. Input a NTSC 3.58 MHz COLOR BAR pattern.
- 2. Short circuit between pin 1 of IC331 and ground.
- 3. Adjust CT331 to obtain color synchronization.
- 4. Remove the jumper wire from IC331.

REF OSC 4.43 MHz Adjustment (CT332)

- 1. Input a NTSC 4.43 MHz COLOR BAR pattern.
- 2. Short circuit between pin 10 of IC331 and ground.
- 3. Adjust CT332 to obtain color synchronization.
- 4. Remove the jumper wire from IC331.


1H DELAY LINE Adjustment (L332, RV331)

- 1. Input a PAL COLOR BAR pattern.
- Connect the oscilloscope to pin (3) (B-Y) of IC331 and observe the waveform of the H block on the oscilloscope.
- 3. Adjust L332 to minimize the double waveform outline.

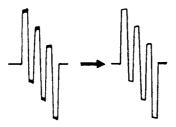

Before Adjustment After Adjustment

- 4. Input a TEST COLOR BAR pattern.
- Rotate the RV331 control and adjust till the ANTI-PAL of the waveform matches the 0 level.

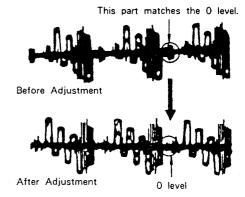


6. L332 and RV331 affect each other. Repeat till the conditions of both meet.

SECAM ID Adjustment (L335)

- 1. Input a SECAM COLOR BAR pattern.
- 2. Connect a Digital Multimeter to pin ② of IC331.
- Adjust L335 so that the indicator goes up to the maximum.


BELL FILTER Adjustment (T331)

- 1. Input a SECAM COLOR BAR pattern.
- 2. Connect an oscilloscope to the Q335 emitter.
- 3. Adjust T331 so that the waveform becomes flat.

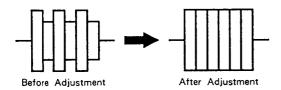


SECAM DISCRI Adjustment (L333, L334)

- 1. Input a SECAM COLOR BAR pattern.
- 2. Connect an oscilloscope to pin ① of IC331.
- 3. Adjust L333 so that white and black parts of the waveform of pin ① become 0 level.
- 4. Connect an oscilloscope to pin 3 of IC331.
- 5. Adjust L334 so that white and black parts of the waveform of pin 3 become 0 level.

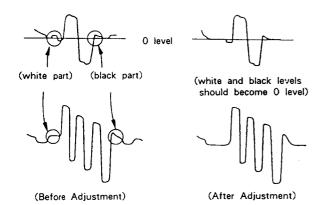

4-2. D BOARD ADJUSTMENTS

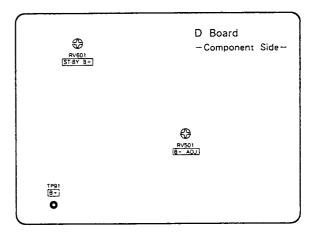



B+ Adjustment (RV501)


- 1. Connect a Digital Multimeter to TP91.
- 2. Adjust RV501 so that the voltage becomes 135 $\pm 0.2~\text{V}.$

H. PHASE Adjustment (RV502)

- 1. Input a PAL TEST COLOR BAR pattern.
- 2. Set the CONTRAST and BRIGHTNESS controls to the standard positions.
- 3. Set RV1508 (H. CENT) to the mechanical center position.
- Connect an oscilloscope to pin (1) (SPC OUT) of IC501.
- 5. Rotate RV502 and adjust Block T to 5.1 \pm 0.1 μ s.

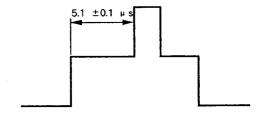

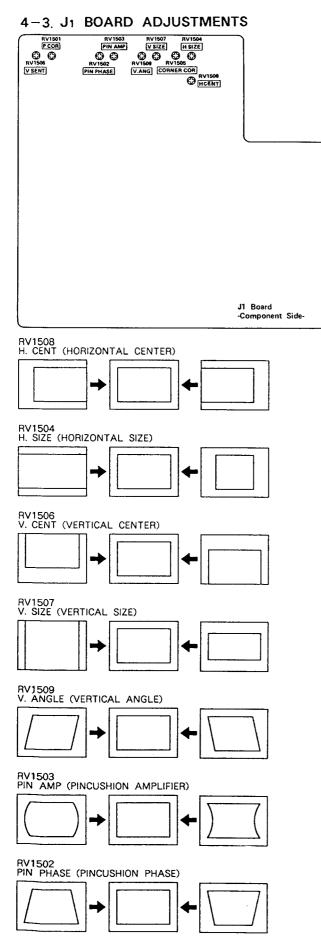


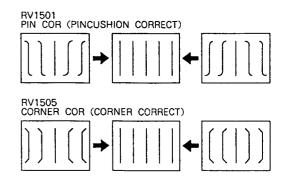


KX-2910 KX-2910


SECTION 5 DIAGRAMS

5-1. BLOCK DIAGRAM

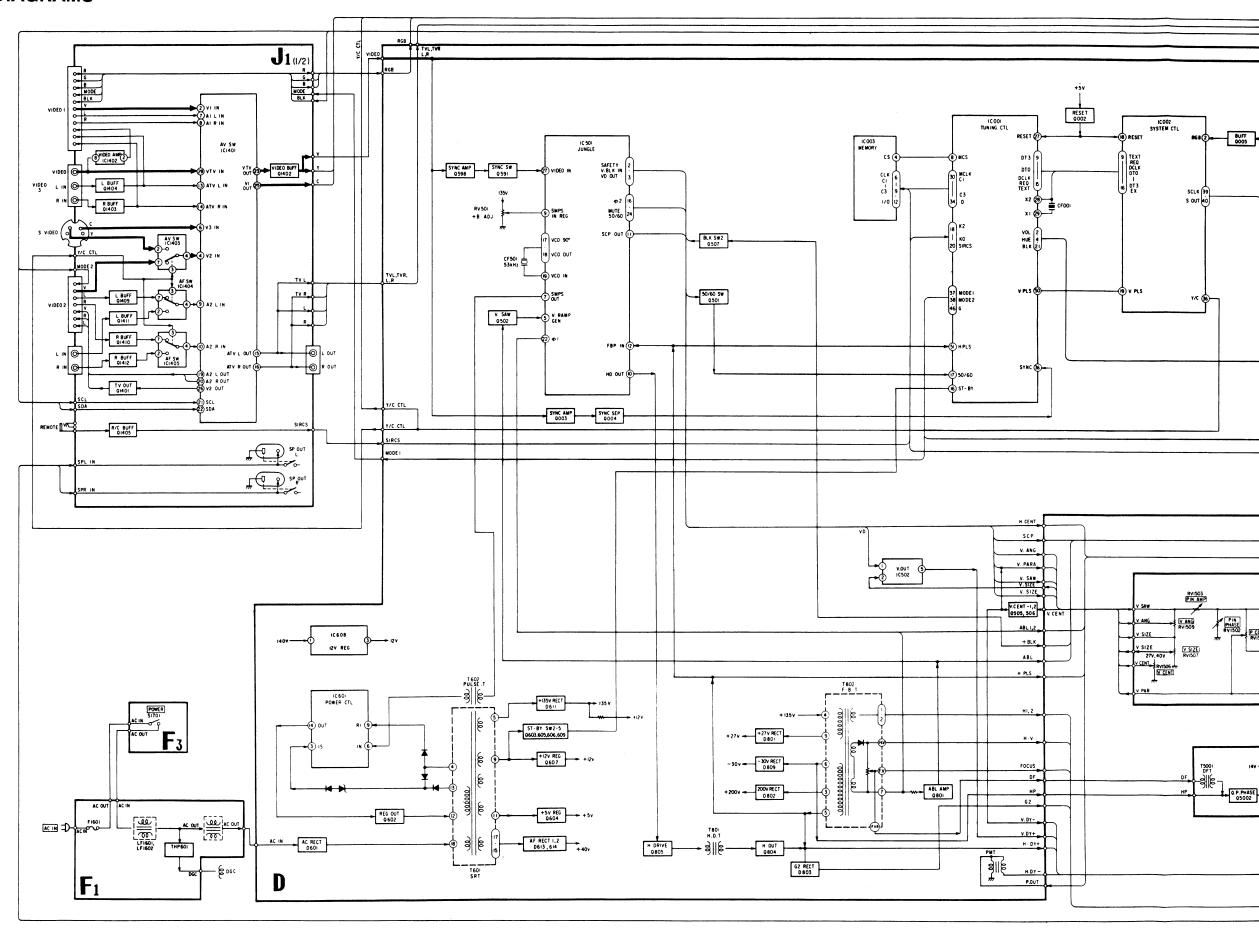

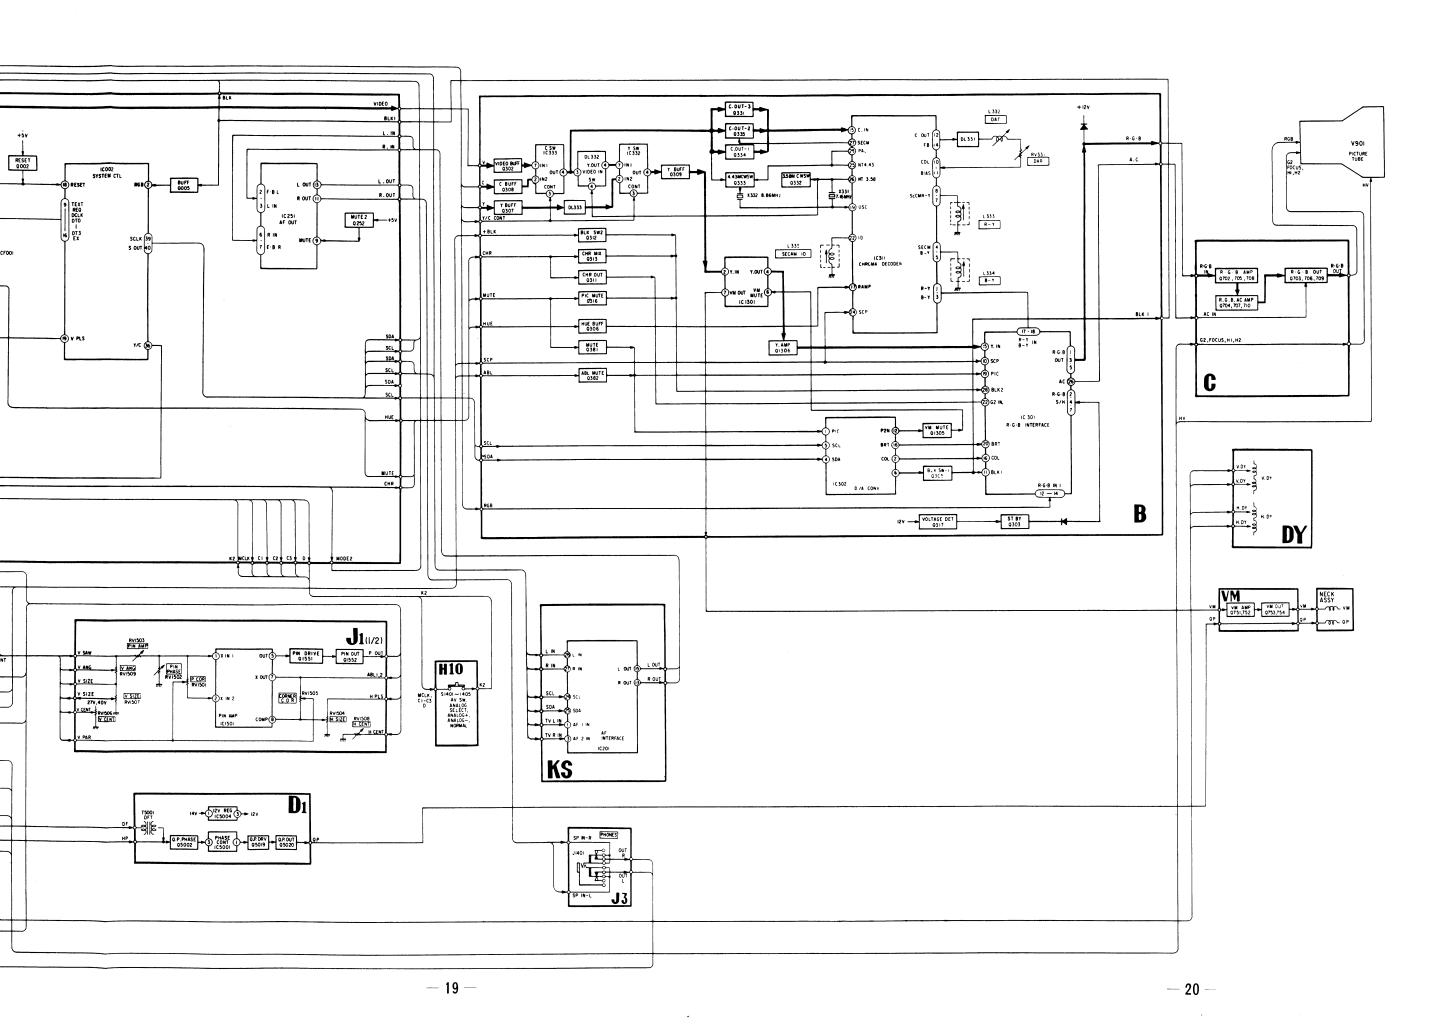

5-2. CIRCUIT BOARDS LOCATION

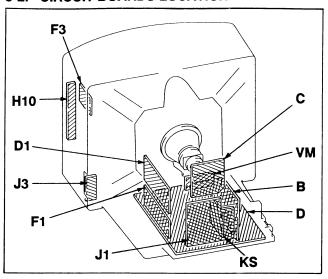

5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS — Conductor Side —

Note: The components identified by shading and mark A are critical for safety. Replace only with part number specified.

Note:

- All capacitors are in μF unless otherwise noted. p: $\mu \mu F$ 50WV or less are not indicated except for electrolytic and tantalums.
- · All resistors are in ohms.
- $k\Omega = 1000\Omega$, $M\Omega = 1000k\Omega$
- Indication of resistance, which does not have one for rating electrical power is as follows.


Rating electrical power: 1/4W


- monflamable resistor.
- Δ : internal component.
- _____: panel designation or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Readings are taken with a color-bar signal input.
- Readings are taken with a $10M\Omega$ digital multimeter.
- Voltages are dc with respect to ground unless otherwise
- Voltage variations may be noted due to normal production tolerances.
- All voltages are in V.
- \times : Can not be measured.
- Circled numbers are waveform references.

- : B + bus.
- --- : B bus.
- 🛸 : signal path.

	: RC : FPRD : FUSE	SOLID NONFLAMMABLE CARBON NONFLAMMABLE FUSIBLE	: RB : RW : *	NONFLAMMABLE CEMENT NONFLAMMABLE WIREWOUND ADJUSTMENT RESISTOR
COIL CAPACITOR	: LF-8L	MICRO INDUCTOR TANTALUM STYROL POLYPROPYLENE MYLAR	: MPS : MPP : ALB : ALT : ALR	METALIZED POLYESTER METALIZED POLYPROPYLENE BIPOLAR HIGH TEMPERATURE HIGH RIPPLE

(AV SW, PIN AMP, AF SW, VIDEO AMP) (LINE FILTER) (POWER SW)

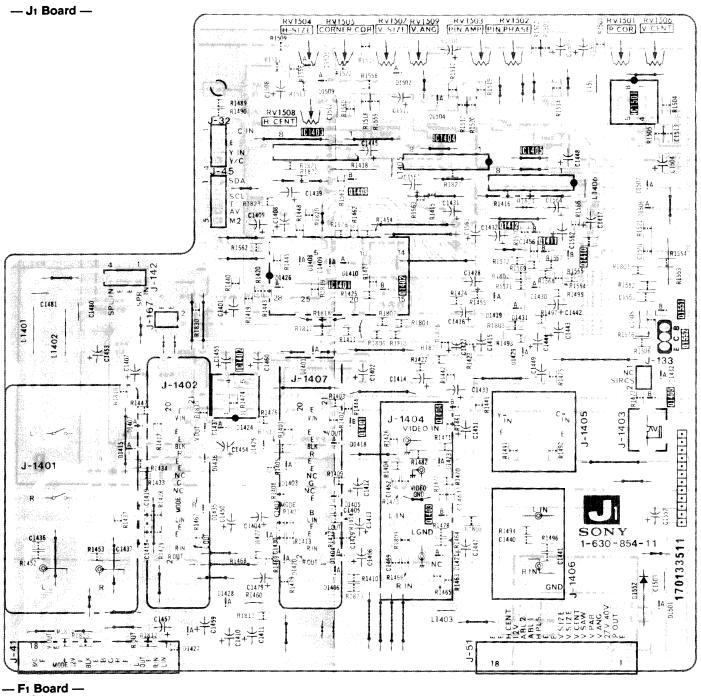

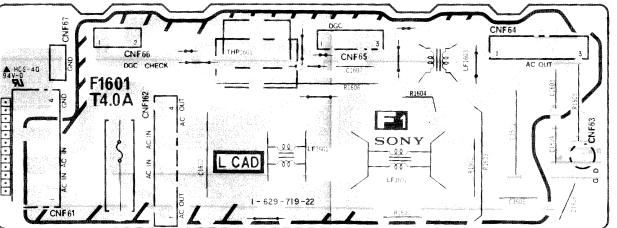


- B Board -170133511 B I SDA B-31 (MI) 1-630-853-11

H10


(CUSTOMER CONTROL)

(CHROMA DECODER)

-- H10 Board --

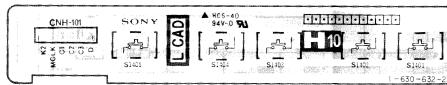


- F₃ Board -

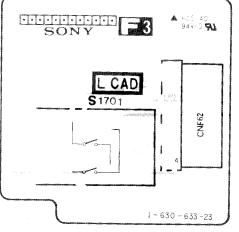





NONFLAMMABLE METAL OXIDE

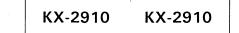







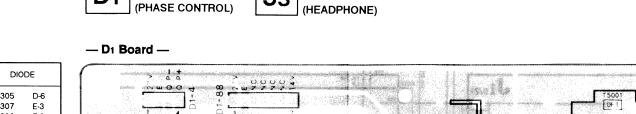


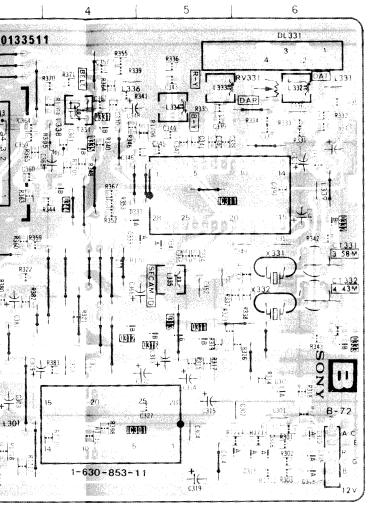



, IC	;	DIO	DE
IC301	E-4	D305	D-6
IC302	D-2	D307	E-3
IC311	B-5	D309	E-2
IC332	A-2	D310	E-3
IC333	A-1	D311	E-3
TRANS	ICTOR	D312	E-3
IHANS	15 1 UK	D314	E-5
0000	A-1	D315	E-6
Q302		D316	E-6
Q303	E-1 E-2	D317	E-1
Q305			
Q306 Q307	A-1 B-2	D318	E-6
Q307	B-2	D319	E-6
Q308	A-3	D320	E-6
Q308	C-2	D331	C-4
Q309 Q311	D-5	D333	C-4
Q311	D-4		
Q313	D-5	D341	C-5
Q316	D-5	VARIA	
Q317	E-1	RESIS	TOR
Q331	B-4	RV331	A-6
Q332	C-7		
Q333	D-6	CT331	C-6
		CT332	D-6
Q335	B-4		
Q344	B-4		
Q381	C-2		
Q382	C-3		
Q1305	C-2		
Q1306	C-3		

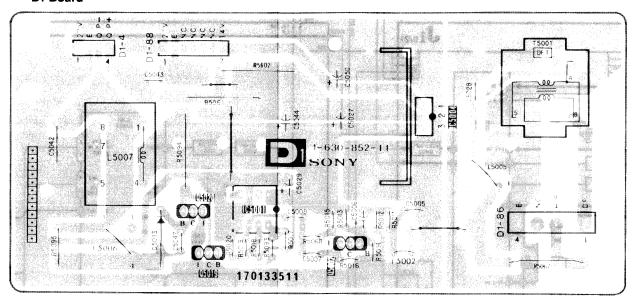


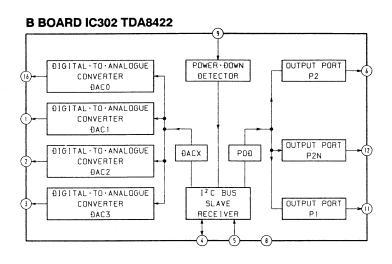


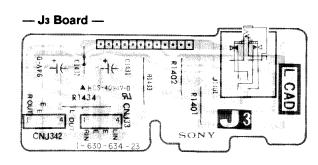

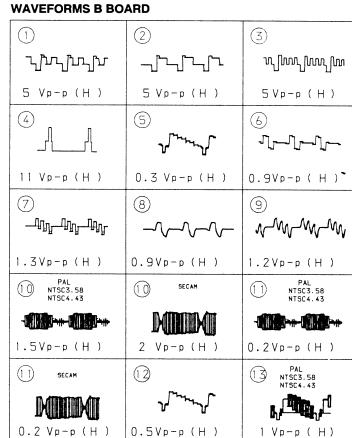


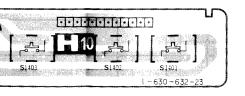


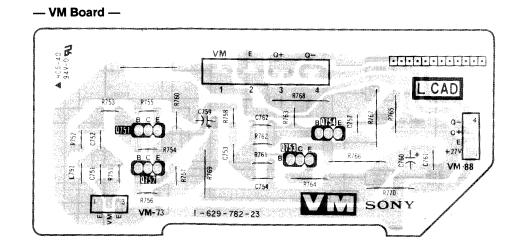


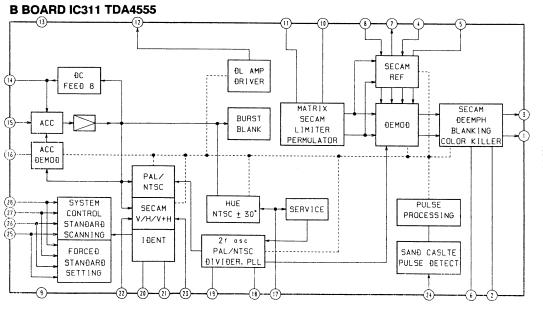



 $0.9V_{P-P}(H)$

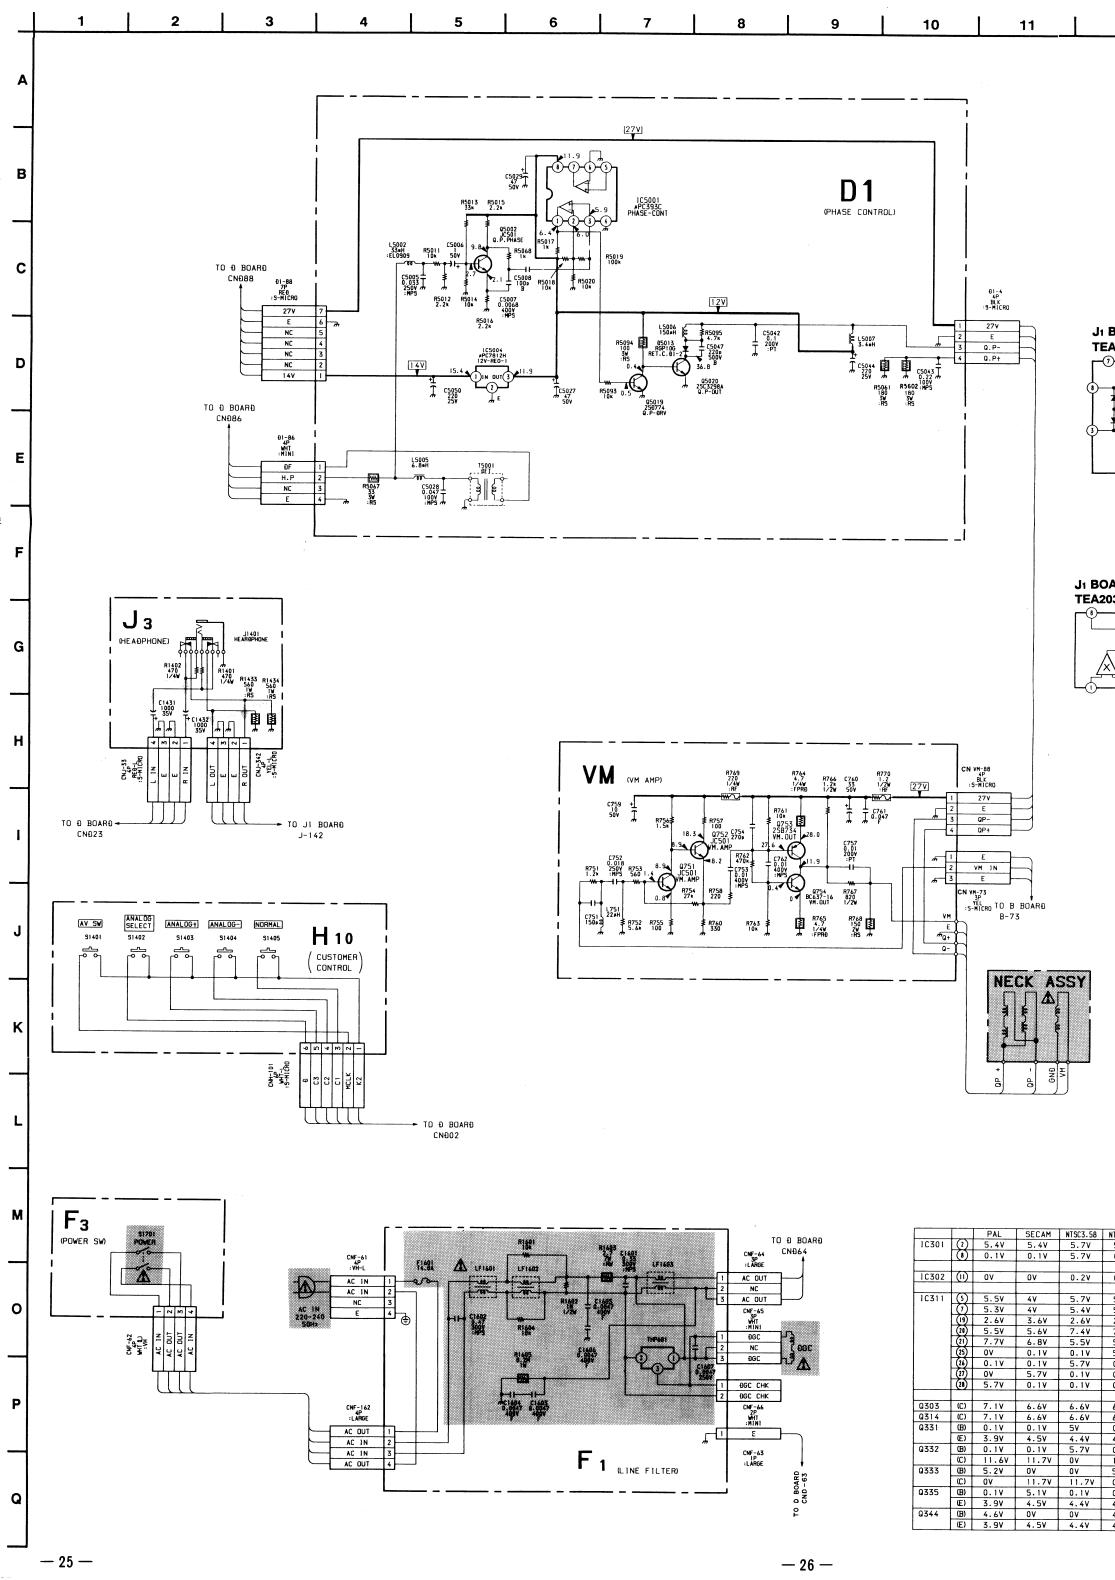


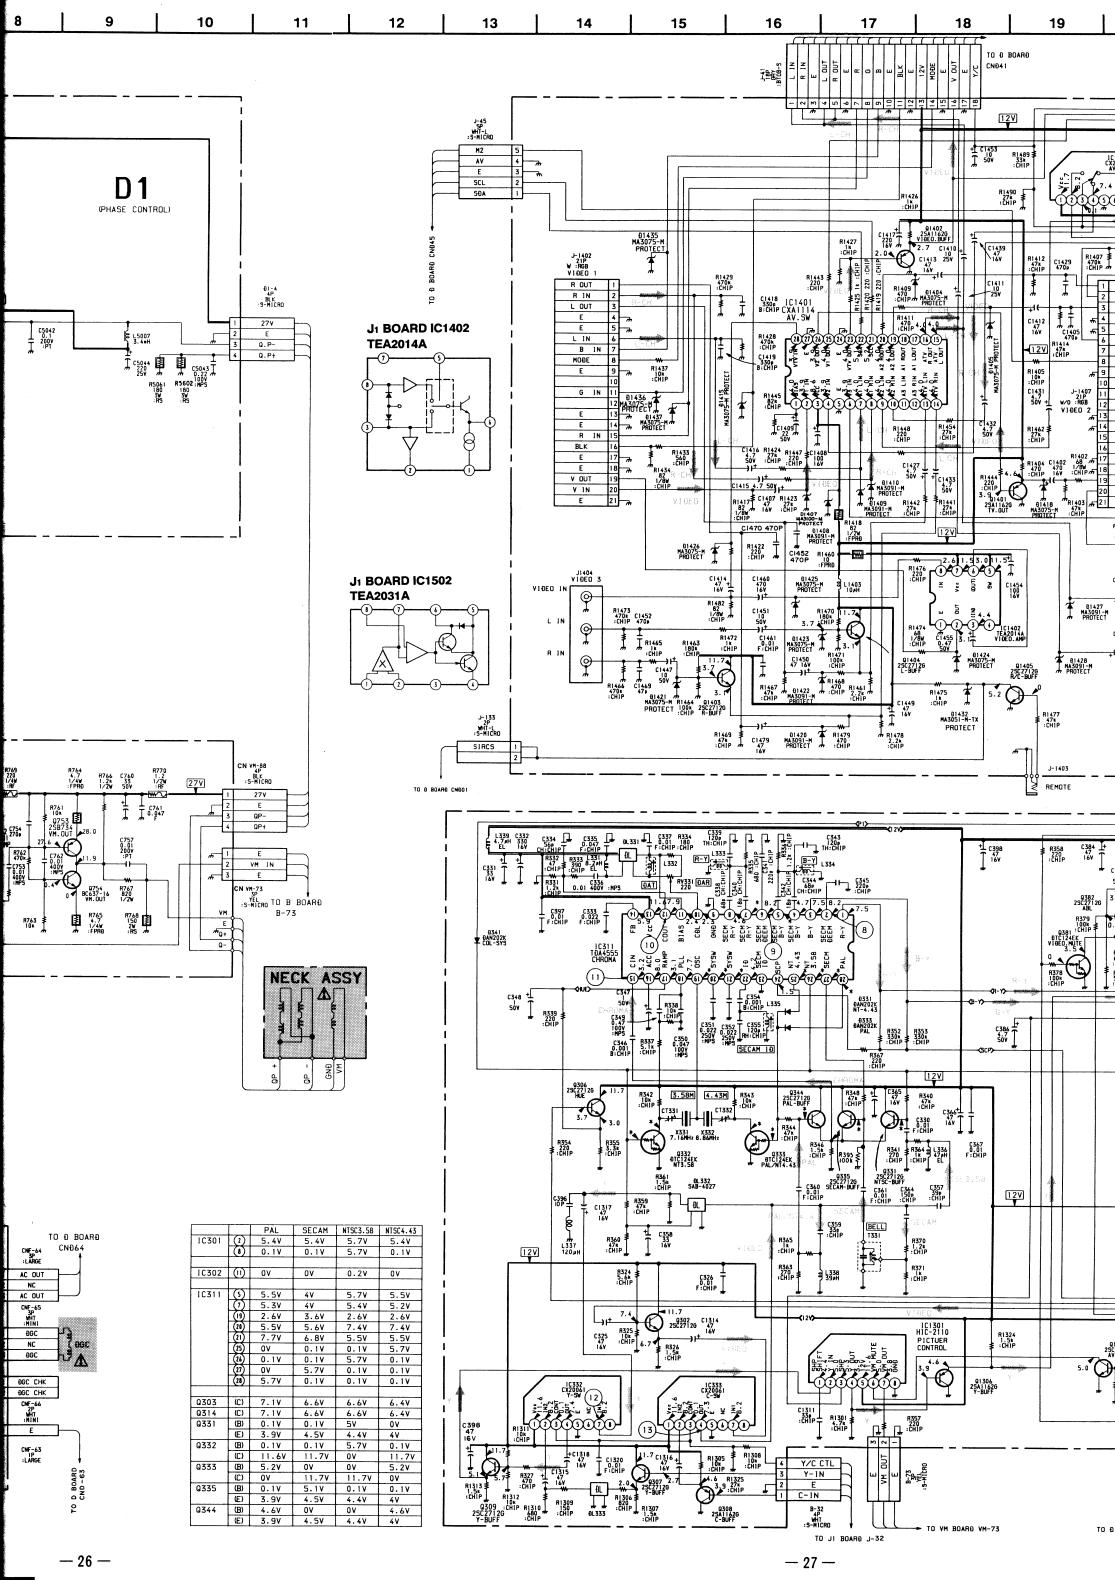


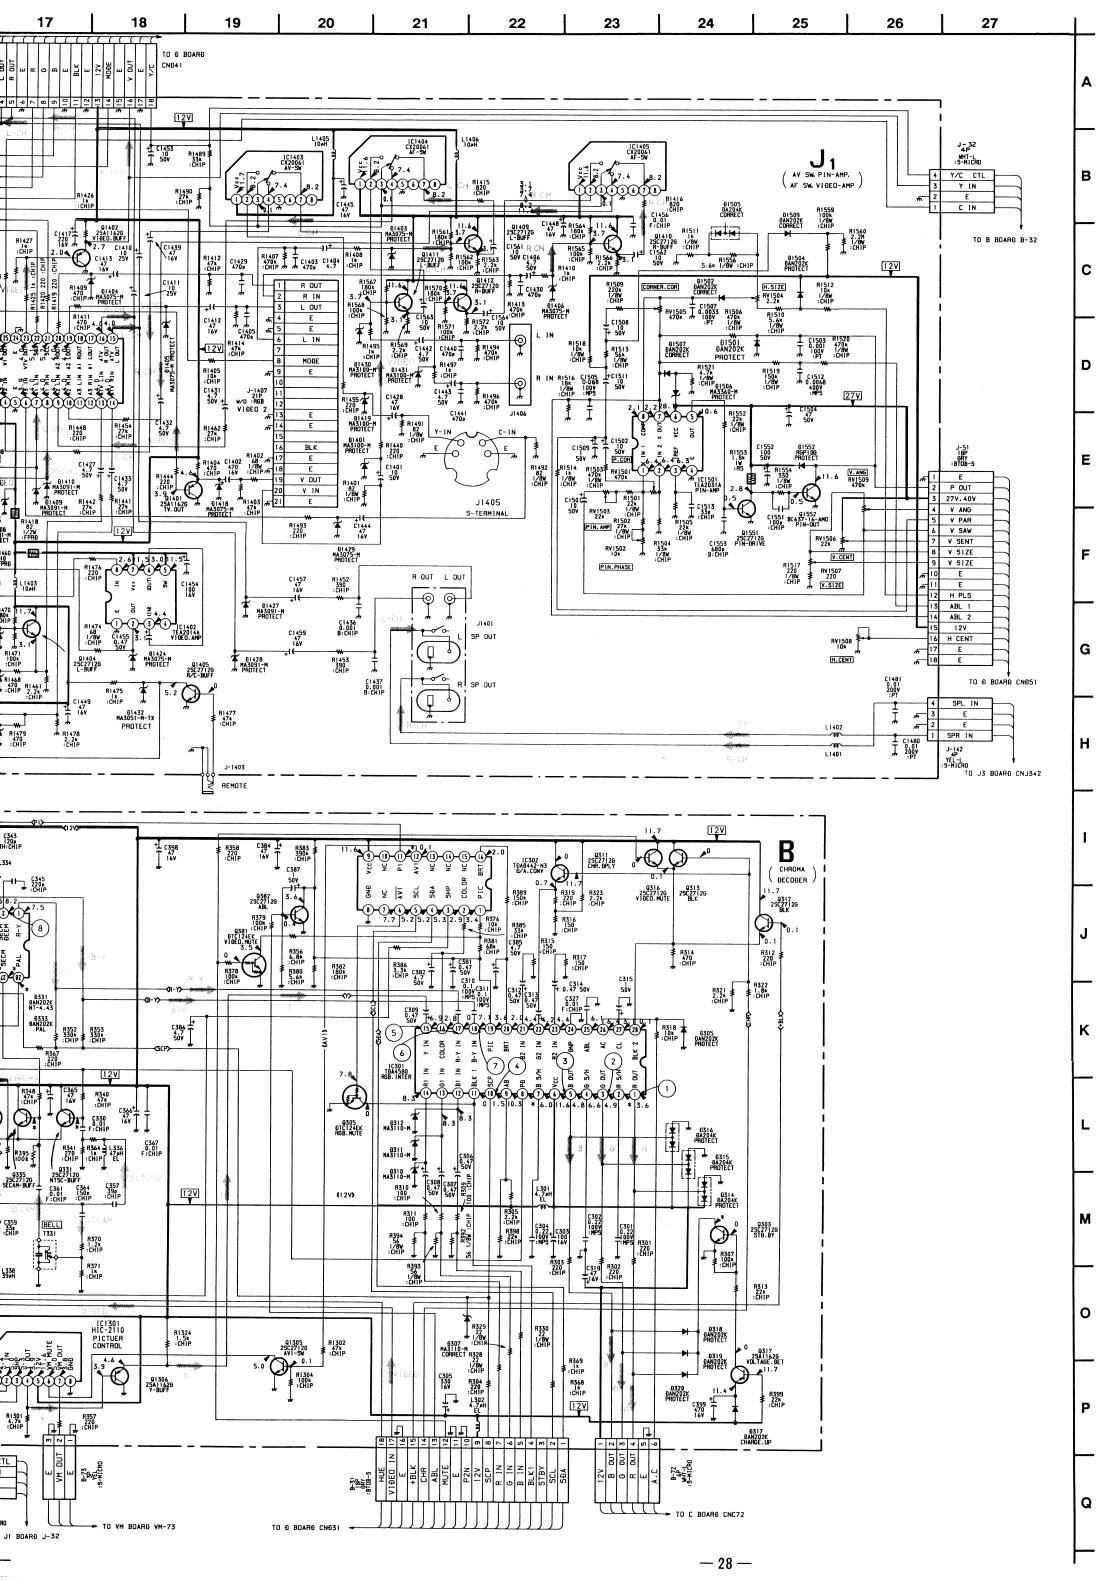

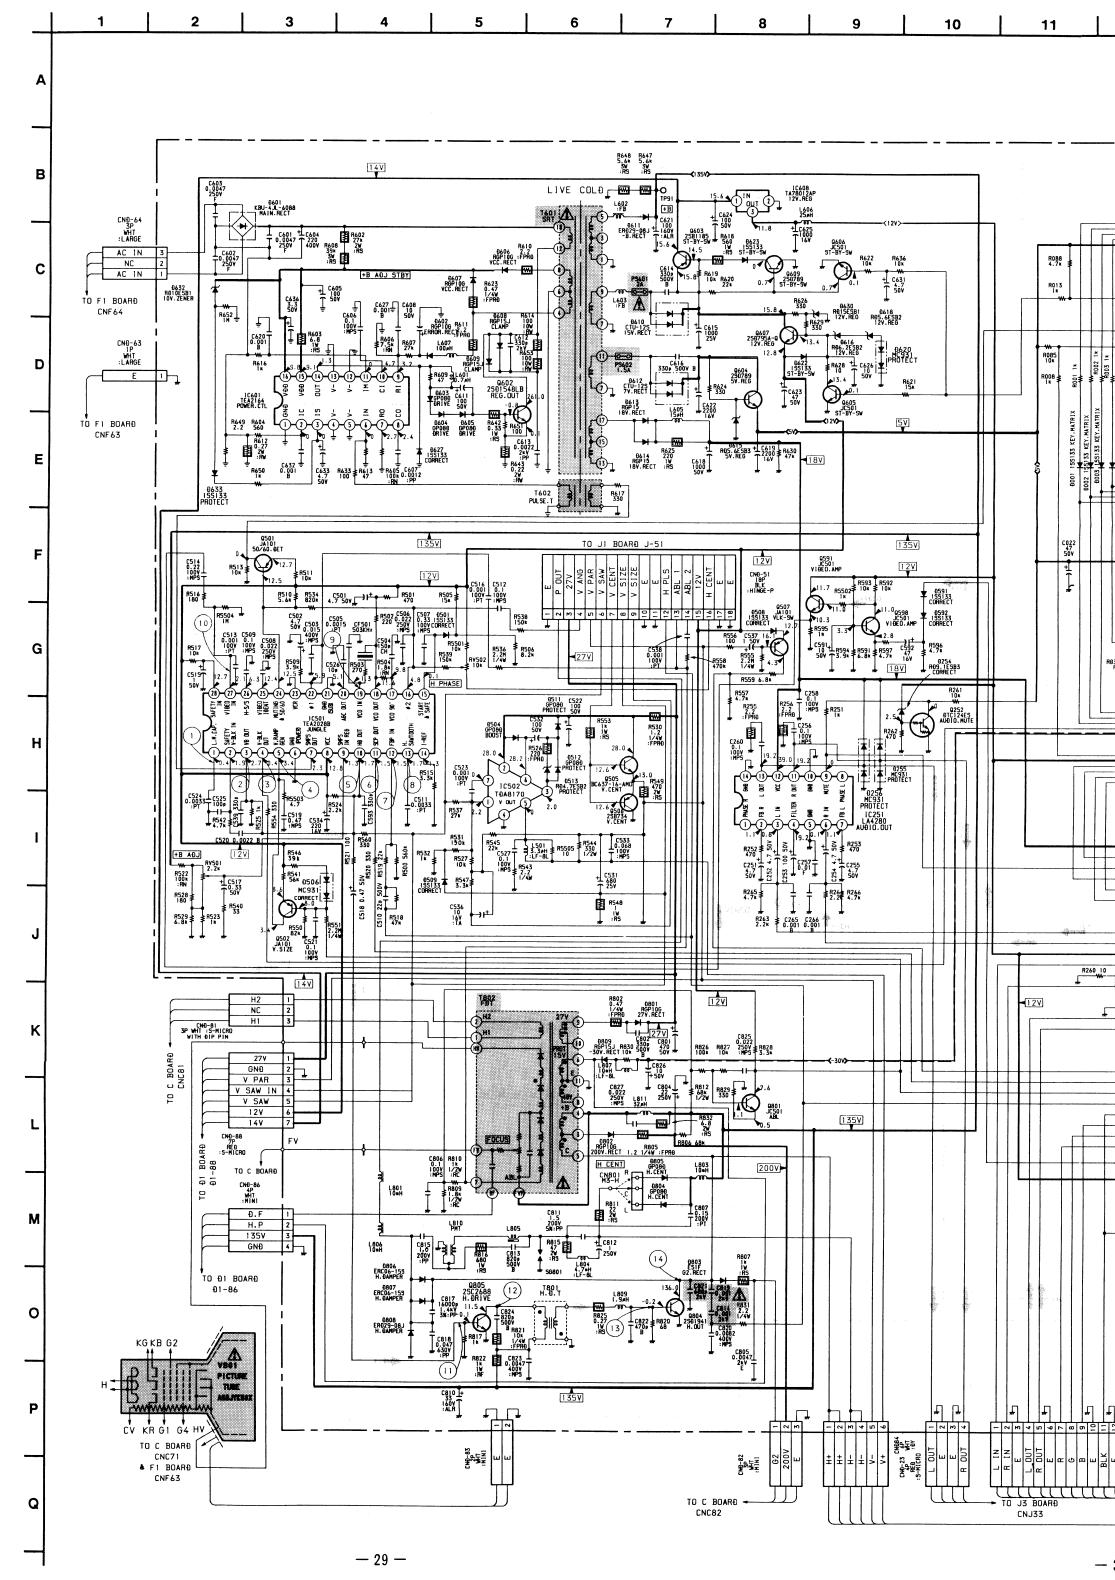

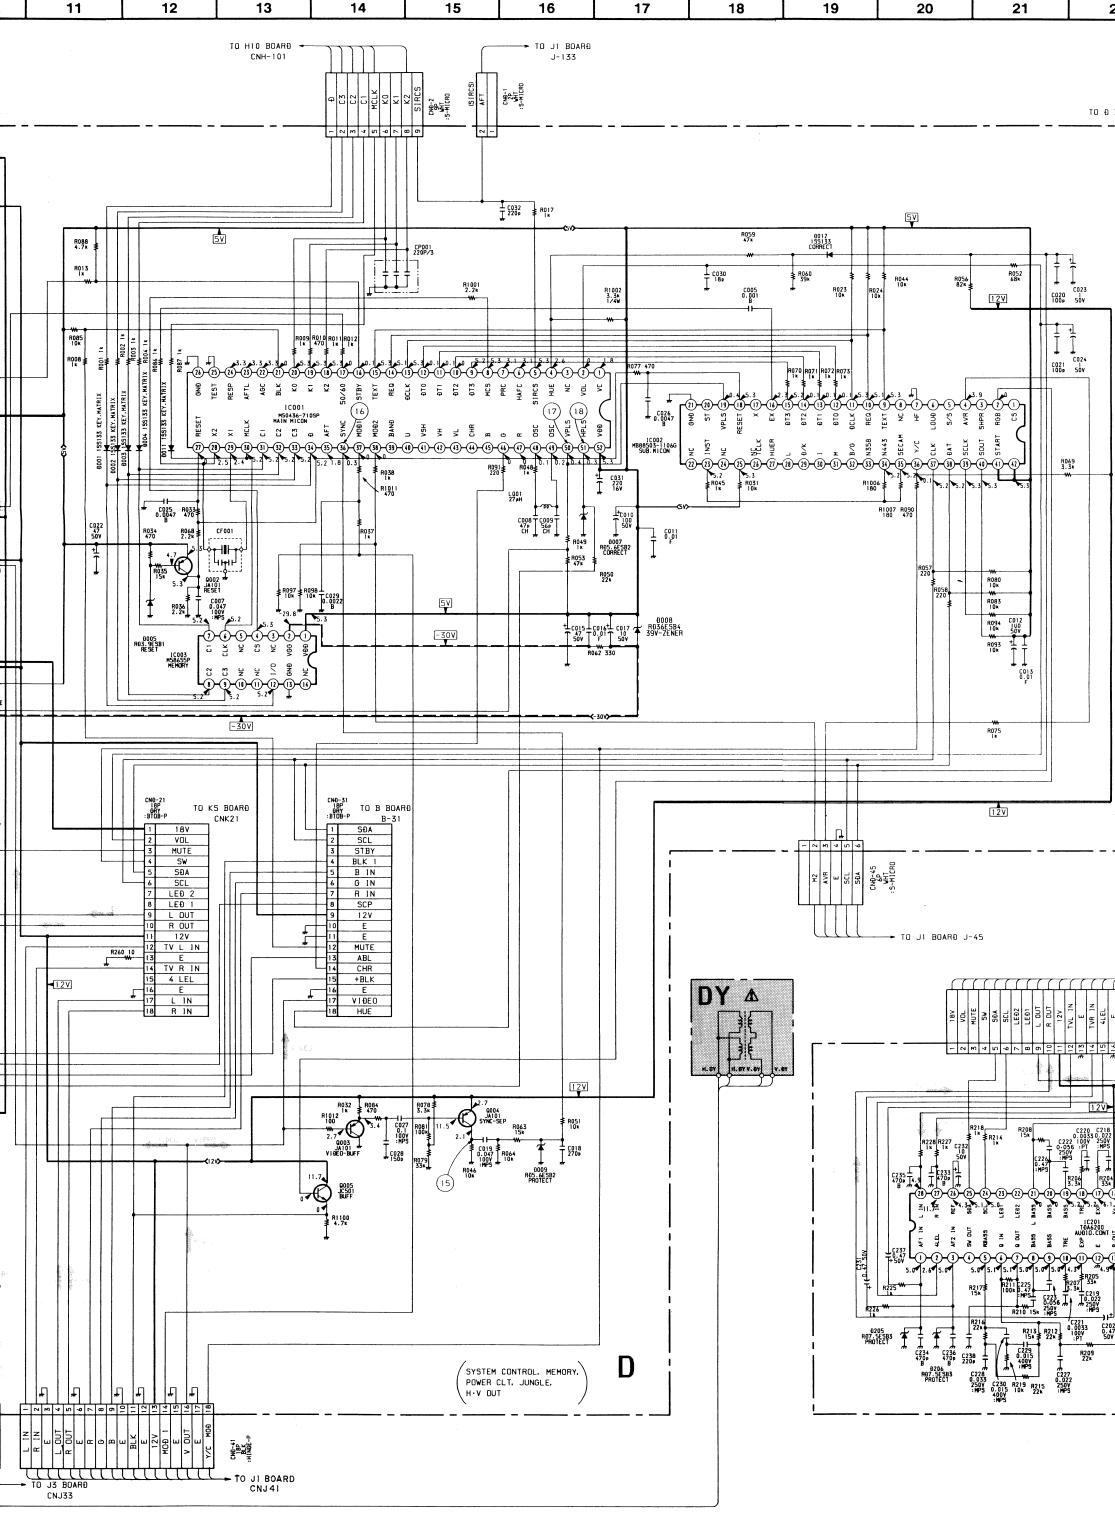

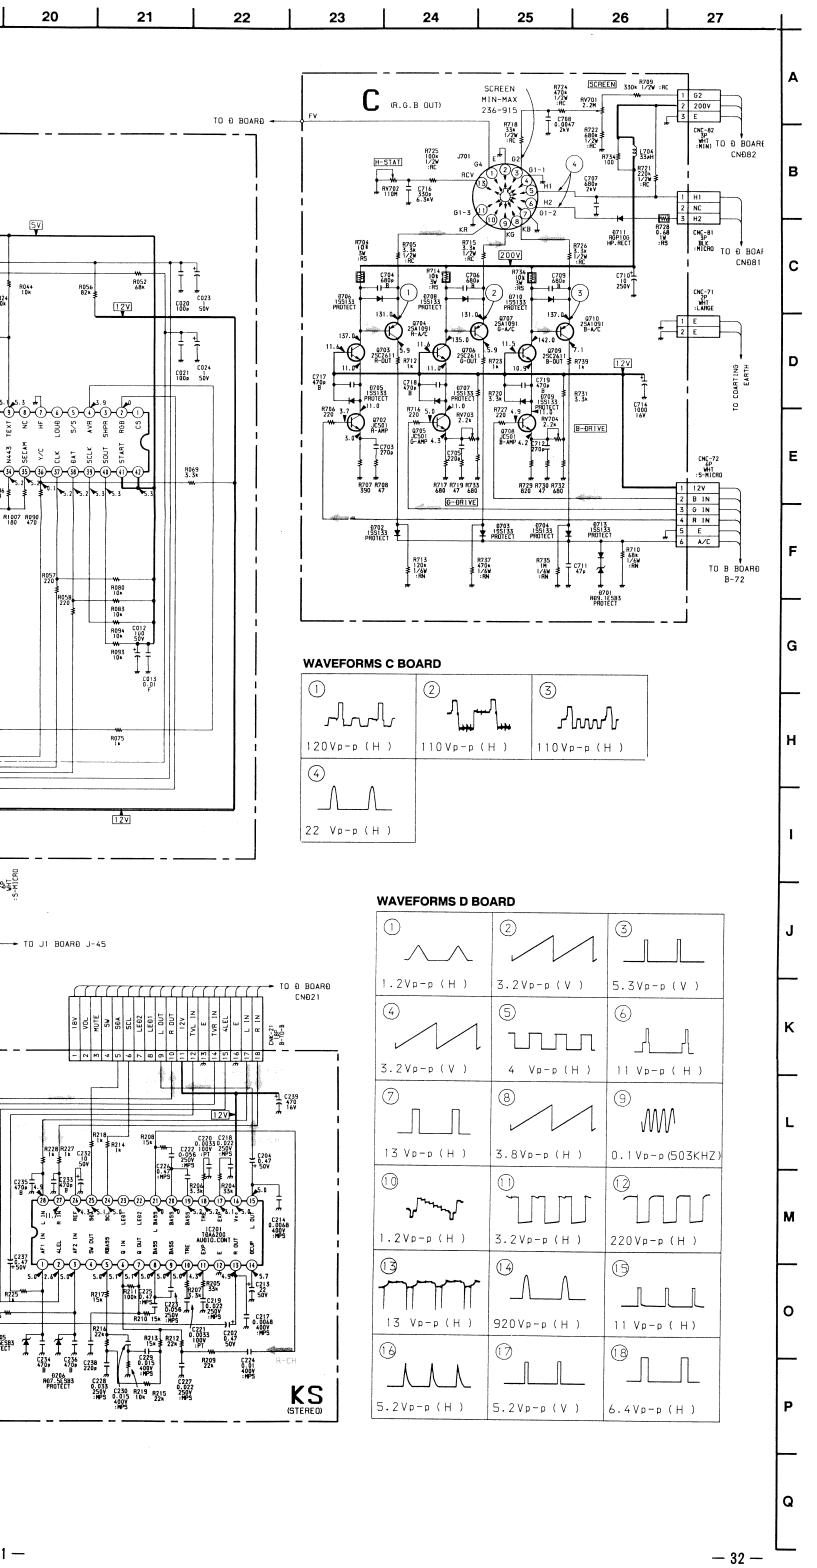

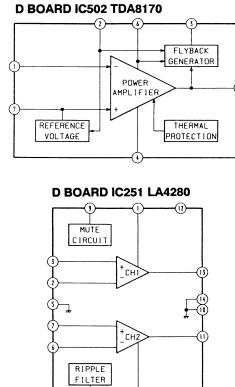


9


The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

C (R-G-B OUT


— C Board —

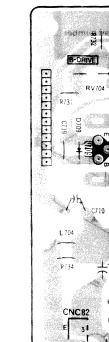

— KS Board

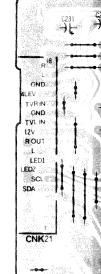


L CAL

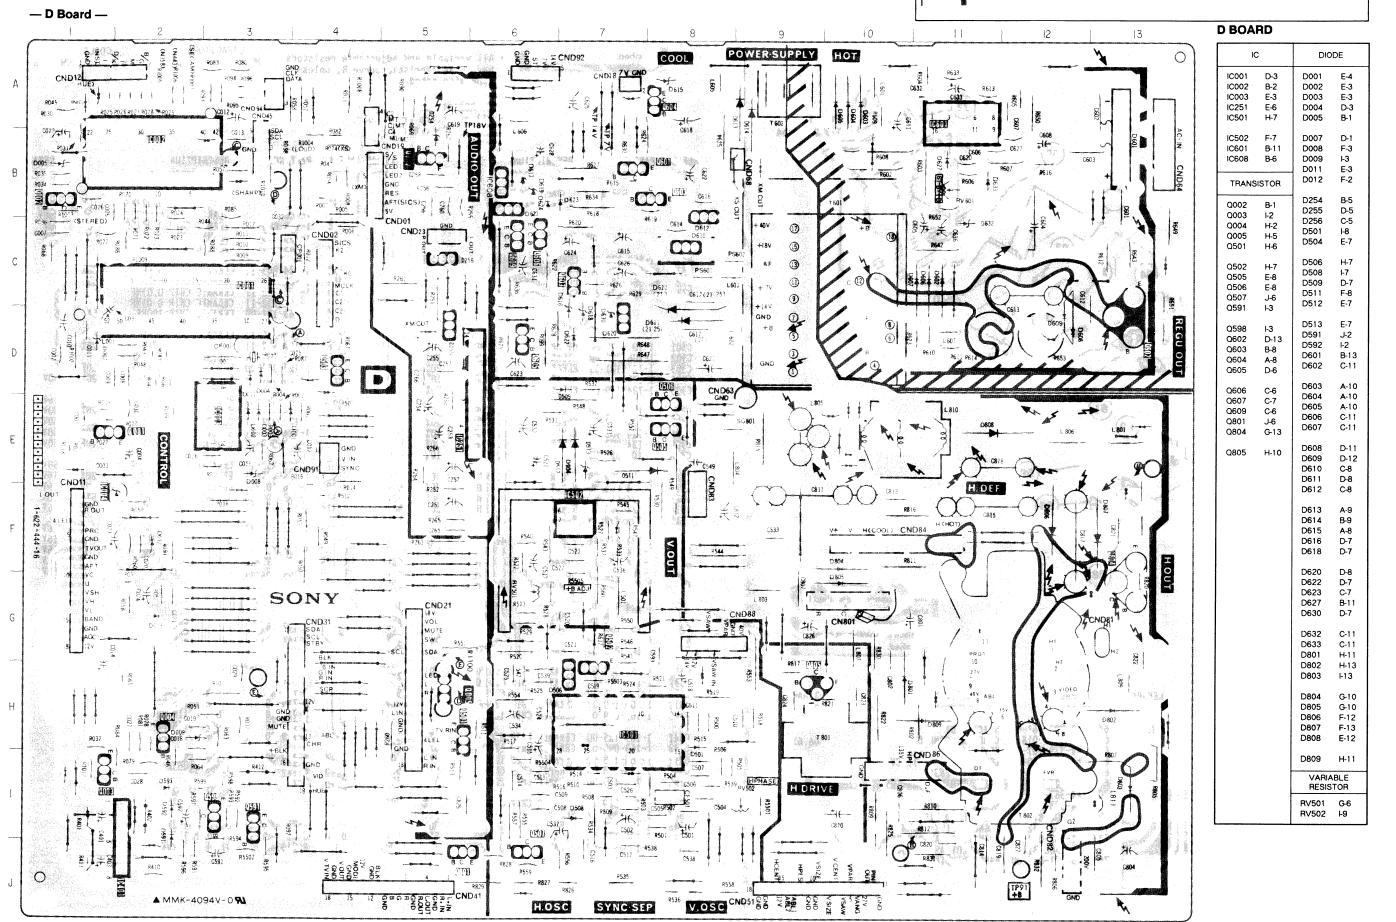


(SYSTEM CONTROL, MEMORY, POWER CONTROL, JUNGLE, H•V OUT)




— C Board —

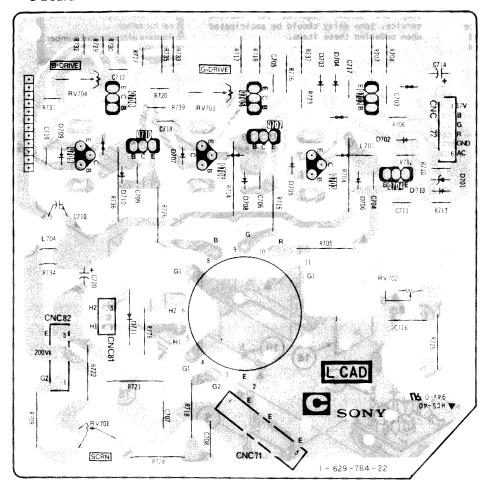


-- KS Board --

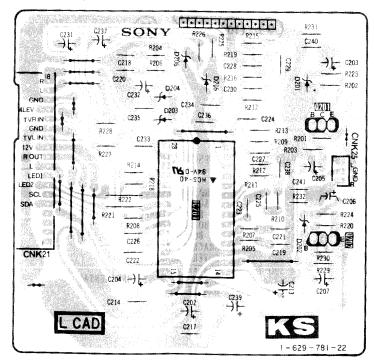

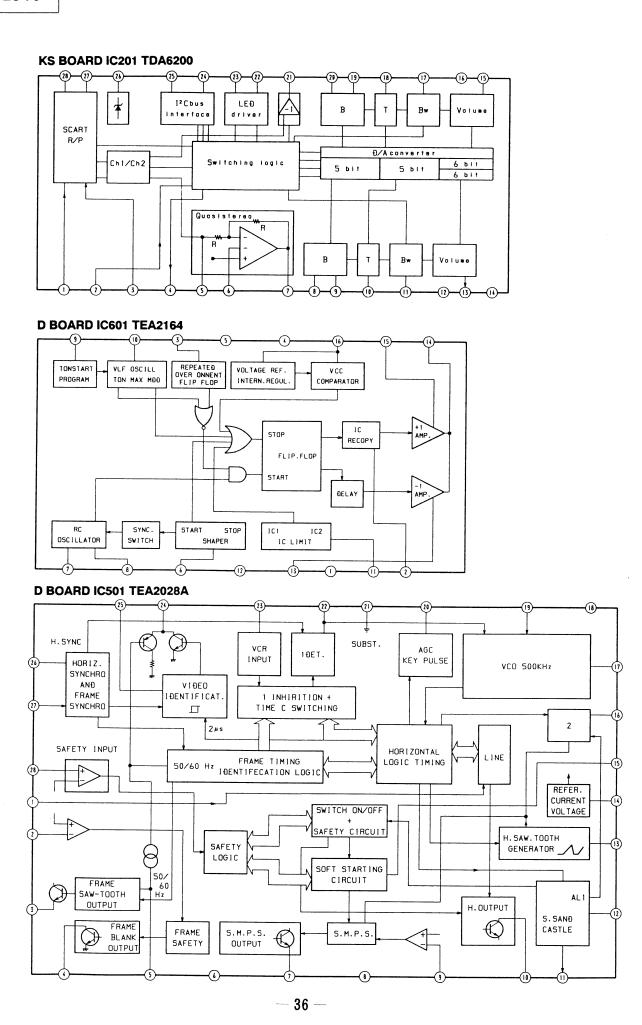

5-4. SEMICONDUCTORS

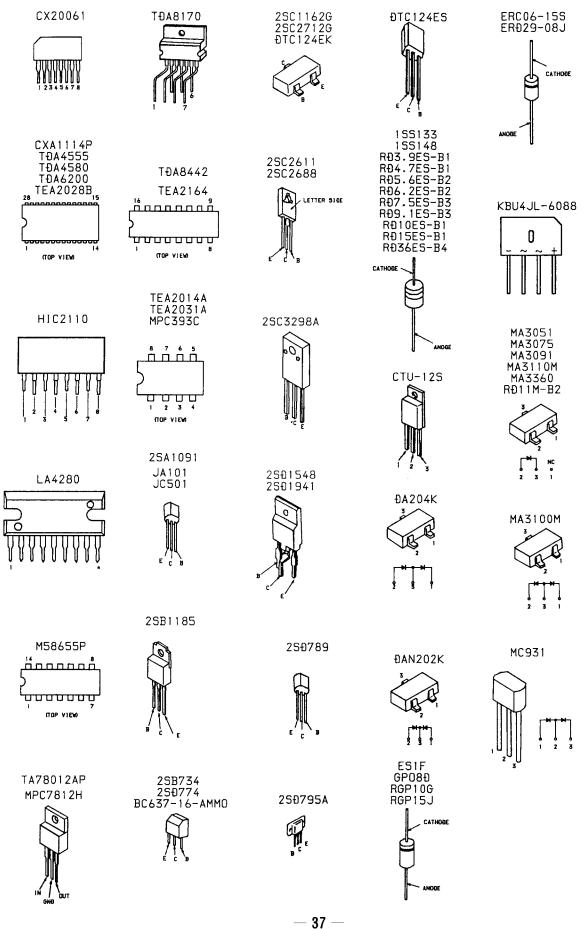

SECTION 6 **EXPLODED VIEWS**


NOTE:


- . Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark 🐧 are critical for safety.

Replace only with part number specified. .



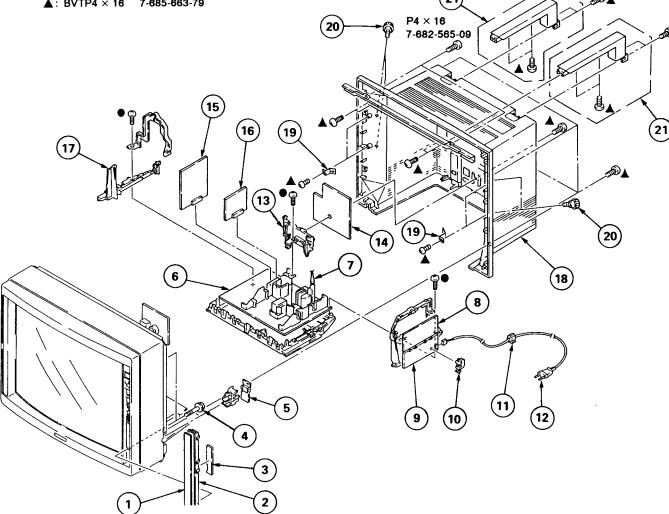

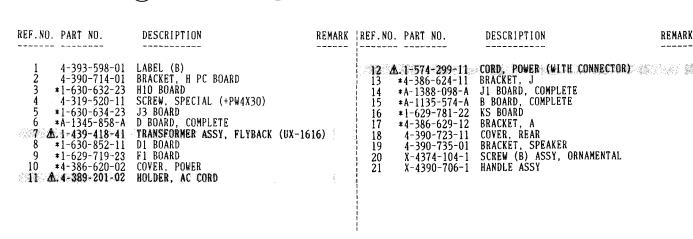

SECTION 7 ELECTRICAL PARTS LIST

В

6-2. PICTURE TUBE ●: BVTP3 × 12 7-685-648-79

P6 × 12 7-682-588-04 **(65)** (67)**66**)

> The components identified by shading and mark A are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF. NO	O. PART NO.	DESCRIPTION	REMARK
57 A 58 59 60 A 61 A	4-319-520-11 4-319-520-11 .8-733-823-05 .1-451-313-22	BEZNET ASSY BUTTON, POWER SPRING, COMPRESSION LABEL (L) LABEL (A) (R) F3 BOARD SWITCH, PUSH (AC POWER) SHAFT, BUTTON SCREW, SPECIAL (+PW4X30) PICTURE TUBE (A68JYK60X) DEFLECTION YOKE (Y29FXA) NECK ASSY, PICTURE TUBE (NA-308 VM BOARD		64 65 66 67 70 71 72 73 74 75 76	3-703-961-01 *A-1331-018-A *4-379-167-01 *4-379-160-01 4-369-318-00 A. 1-426-398-11 *4-387-216-01 4-373-263-11 4-308-870-00 1-452-032-00 1-452-094-00 X-4306-312-0 3-701-007-00	SPACER, DY C BOARD, COMPLETE COVER (MAIN), CV COVER (REAR LID), CV SPRING, TENSION COIL, DEMAGNETIZATION HOLDER, LEAD SCREW (M), PT CLIP, LEAD WIRE MAGNET, DISK; 10MM \$ MAGNET, ROTATABLE DISK; 15M PERMALLOY ASSY, CONVERGENCE BAND, BINDING	1M ø

The components identified by shading and mark 🐧 are critical for safety. Replace only with part number specified.

Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

When indicating parts by reference number, please include the board name.

 All variable and adjustable resistors have characteristic curve B, unless otherwise noted.


CAPACITORS COILS - MMH : inH, UH : μH

- RESISTORS
 All resistors are in ohms
 F : nonflammable

	. PART NO.	DESCRIPTION			KEMARK	REF.NU.	PART NO.	DESCRIPTION			REMARK
	*A-1135-574-A	B BOARD, COM				C351 C352 C354 C355	1-106-375-12 1-106-375-12 1-163-009-11 1-163-119-00	MYLAR MYLAR CERAMIC CHIP CERAMIC CHIP	120PF	10% 10% 10% 5%	250V 250V 50V 50V
31 32 372 373	*1-562-370-21 *1-568-879-51 *1-564-521-11 *1-568-878-81	PIN, CONNECT PLUG, CONNEC	OR 4P TOR 6P	OARD 18P		C357 C358 C359 C360 C361	1-163-107-00 1-124-963-11 1-163-105-00 1-164-232-11 1-164-232-11 1-163-121-00	CERAMIC CHIP ELECT CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	33MF 33PF 0.01MF 0.01MF	20% 5% 5%	50V 16V 50V 50V 50V 50V
	<cap< td=""><td>ACITOR></td><td></td><td></td><td></td><td>C364 C365</td><td>1-124-477-11</td><td>ELECT</td><td>47MF</td><td>20%</td><td>16V</td></cap<>	ACITOR>				C364 C365	1-124-477-11	ELECT	47MF	20%	16V
301 302 303 304 305	1-126-101-11	MYLAR MYLAR ELECT MYLAR ELECT	0.22MF 0.22MF 100MF 0.22MF 330MF	10% 10% 20% 10% 20%	100V 100V 16V 100V 16V	C366 C367 C381 C382	1-124-477-11 1-124-477-11 1-164-232-11 1-124-902-00 1-124-927-11	ELECT CERAMIC CHIP ELECT ELECT	47MF	20% 20% 20% 20%	16V 50V 50V 50V
06 07 08 09	1-124-902-00 1-124-902-00 1-124-902-00	ELECT ELECT ELECT ELECT MYLAR	0.47MF 0.47MF 0.47MF 0.47MF 0.1MF	20% 20% 20% 20% 10%	50V 50V 50V 50V 100V	C384 C385 C386 C387 C396	1-124-477-11 1-124-927-11 1-124-927-11 1-124-499-11 1-102-947-00	ELECT ELECT ELECT ELECT CERAMIC	47MF 4.7MF 4.7MF 1MF 10PF	20% 20% 20% 20% 1PF	16V 50V 50V 50V 50V
311 312 313 314 315	1-106-220-00 1-124-902-00 1-124-902-00	MYLAR	0.1MF 0.47MF 0.47MF 0.47MF	10% 20% 20% 20% 20%	100V 50V 50V 50V 50V	C397 C398 C399 C1311 C1314	1-164-232-11 1-124-477-11 1-126-103-11 1-163-105-00 1-124-477-11	CERAMIC CHIP ELECT ELECT CERAMIC CHIP ELECT	47MF 470MF	20% 20% 5% 20%	50V 16V 16V 50V 16V
19 25 26 27	1-124-477-11 1-124-477-11 1-164-232-11	ELECT ELECT	47MF 47MF 0.01MF 0.01MF	20% 20%	16V 16V 50V 50V 50V	C1317	1-124-477-11 1-124-477-11 1-124-477-11 1-124-477-11 1-164-232-11	ELECT ELECT ELECT ELECT CERAMIC CHIP	47MF 47MF 47MF 47MF 0.01MF	20% 20% 20% 20%	16V 16V 16V 16V 50V
31	1-124-963-11		33MF	20%	16V	1	<tri< td=""><td>MMER></td><td></td><td></td><td></td></tri<>	MMER>			
32 33 34 35	1-163-111-00	ELECT CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	56PF	20% 5%	16V 50V 50V 50V		. 1-141-181-11 1-141-181-11				
336 337	1-106-367-00	MYLAR CERAMIC CHIP	0.01MF	10%	400V 50V	 	<010	DE>			
338 339 340	1-163-113-00 1-163-119-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	68PF 120PF	5% 5% 5%	50V 50V 50V	D305 D307 D310 D311	8-719-106-62 8-719-106-62	DIODE MA152W DIODE RD11M-I DIODE RD11M-I DIODE RD11M-I	B2 B2		
341 342 343 344	1-163-125-00 1-163-099-00 1-163-119-00 1-163-113-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	18PF 120PF	5% 5% 5% 5%	50V 50V 50V 50V	D312 D314 D315	8-719-106-62 8-719-800-76 8-719-800-76	DIODE RDIIM-I DIODE 1SS226 DIODE 1SS226			
345	1-163-125-00	CERAMIC CHIP		5%	50V	D316 D317	8-719-800-76 8-719-400-18	DIODE 188226 DIODE MA152WI	K		
346 347 348 349 350	1-163-009-11 1-124-499-11 1-124-499-11 1-136-173-00 1-106-383-00	CERAMIC CHIP ELECT ELECT FILM MYLAR	0.001MF 1MF 1MF 0.47MF 0.047MF	10% 20% 20% 5% 10%	50V 50V 50V 50V 100V	D318 D319 D320 D331	8-719-400-18 8-719-400-18 8-719-400-18 8-719-400-18	DIODE MAI52WI DIODE MAI52WI DIODE MAI52WI DIODE MAI52WI	K K		



REF.NO. PART I	NO. DES	CRIPTION		REMARK	REF.NO.	PART NO.	DESCRIPTION				REMARK
	-400-18 DIOD -400-18 DIOD <delay li<="" td=""><td>E MA152WK E MA152WK</td><td></td><td></td><td>R307 R309</td><td>1-216-097-00 1-216-025-00 1-216-025-00 1-216-025-00 1-216-033-00</td><td>METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE</td><td>100K 100 100 100 220</td><td>5%</td><td>1/10W 1/10W 1/10W 1/10W 1/10W</td><td></td></delay>	E MA152WK E MA152WK			R307 R309	1-216-097-00 1-216-025-00 1-216-025-00 1-216-025-00 1-216-033-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	100K 100 100 100 220	5 %	1/10W 1/10W 1/10W 1/10W 1/10W	
DL331 1-415- DL332 1-236- DL333 1-415-	-122-00 DELA -062-11 MODU	Y LINE LE, Y DELAY	LINE		R313 R314	1-216-081-00 1-216-041-00 1-216-029-00 1-216-029-00 1-216-029-00	METAL GLAZE METAL GLAZE	22K 470 150 150 150	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
IC301 8-759- IC302 8-759- IC311 8-759- IC332 8-752-	-980-60 IC T -947-20 IC T -006-12 IC C	DA8442-N3 DA4555-V8 X20061			R318 R319 R321 R322	1-216-073-00 1-216-033-00 1-216-057-00 1-216-055-00 1-216-057-00	METAL GLAZE METAL GLAZE	10K 220 2.2K 1.8K 2.2K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
IC333 8-752- IC1301 1-235-		X20061 ROL MODULE,	PICTURE		R324 R325 R326 R327 R328	1-216-067-00 1-216-073-00 1-216-053-00 1-216-041-00 1-216-158-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	5.6K 10K 1.5K 470 22	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/8W	
L302 1-408 L331 1-408 L332 1-404	-405-00 INDU -405-00 INDU -408-00 INDU -539-11 COIL -554-11 COIL	ICTOR (ICTOR (1.7UH 1.7UH 3.2UH		R329 R330 R331 R332 R333	1-216-158-00 1-216-158-00 1-216-051-00 1-216-017-00 1-216-039-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22 22 1.2K 47 390	5% 5% 5% 5%	1/8W 1/8W 1/10W 1/10W 1/10W	
L335 1-404 L336 1-408 L337 1-408	-554-11 COIL -554-11 COIL -417-00 INDU -422-00 INDU -416-00 INDU	CTOR CTOR	17UH 12OUH 39UH		R334 R335 R336 R337 R338	1-216-031-00 1-216-045-00 1-216-051-00 1-216-066-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	180 680 1.2K 5.1K 10K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
L339 1-408	-405-00 INDU <transist< td=""><td>ICTOR 4</td><td></td><td></td><td>R339 R340 R341 R342</td><td>1-216-033-00 1-216-089-00 1-216-035-00 1-216-073-00</td><td>METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE</td><td>220 47K 270 10K</td><td>5% 5% 5%</td><td>1/10W 1/10W 1/10W 1/10W</td><td></td></transist<>	ICTOR 4			R339 R340 R341 R342	1-216-033-00 1-216-089-00 1-216-035-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	220 47K 270 10K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W	
Q303 8-729 Q305 8-729 Q306 8-729	-901-00 TRAN -271-22 TRAN	SISTOR 2SC2 SISTOR 2SC2 SISTOR DTC12 SISTOR 2SC2 SISTOR 2SC2	712-G 712-G 24EK 712-G 712-G		R344 R344 R346 R348 R352	1-216-073-00 1-216-089-00 1-216-053-00 1-216-089-00 1-216-109-00 1-216-109-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 47K 1.5K 47K 330K 330K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W 1/10W	
Q309 8-729 Q311 8-729 Q312 8-729 Q313 8-729	-271-22 TRAN -271-22 TRAN -271-22 TRAN -271-22 TRAN	ISISTOR 2SA1 ISISTOR 2SC2 ISISTOR 2SC2 ISISTOR 2SC2 ISISTOR 2SC2	712-G 712-G 712-G		R354 R355	1-216-033-00 1-216-061-00 1-216-069-00 1-216-033-00 1-216-033-00	METAL GLAZE METAL GLAZE	220 3.3K 6.8K 220 220	5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
Q317 8-729 Q331 8-729 Q332 8-729 Q333 8-729	-216-22 TRAN -271-22 TRAN -901-00 TRAN -901-00 TRAN	ISISTOR 2SC2' ISISTOR 2SA1 ISISTOR 2SC2' ISISTOR DTC1 ISISTOR DTC1	162 712-G 24EK 24EK		R359 R360 R361 R363 R364	1-216-089-00 1-216-089-00 1-216-053-00 1-216-035-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 47K 1.5K 270 1K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
Q344 8-729 Q381 8-729 Q382 8-729 Q1305 8-729	-271-22 TRAN -901-00 TRAN -271-22 TRAN -271-22 TRAN	SISTOR 2SC2' SISTOR 2SC2' SISTOR DTC1' SISTOR 2SC2' SISTOR 2SC2'	712-G 24EK 712-G 712-G		R365 R367 R368 R369 R370	1-216-049-00 1-216-033-00 1-216-049-00 1-216-049-00 1-216-051-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 220 1K 1K 1.2K		1/10W 1/10W 1/10W 1/10W 1/10W	
Q1306 8-729 R301 1-216	<pre><resistor -033-00="" meta<="" pre=""></resistor></pre>	R> NL GLAZE 2	20 5% 1 /10		R371 R376 R378 R379 R380	1-216-049-00 1-216-073-00 1-216-097-00 1-216-097-00 1-216-067-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 10K 100K 100K 5.6K	5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R302 1-216 R303 1-216 R304 1-216	-033-00 META -033-00 META -033-00 META	NL GLAZE 2: NL GLAZE 2: NL GLAZE 2:	20 5% 1/10 20 5% 1/10 20 5% 1/10 .2K 5% 1/10	i₩ i₩	R381 R382 R383 R385	1-216-093-00 1-216-103-00 1-216-111-00 1-216-085-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	68K 180K 390K 33K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W	

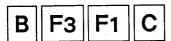

The components identified by shading and mark \triangle are critical for safety.
Replace only with part number specified.

	PART NO.	DESCRIPTION				REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R386 R389 R392 R393 R394	1-216-061-00 1-216-101-00 1-216-168-00 1-216-168-00 1-216-168-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	3.3K 150K 56 56 56	5% 5% 5% 5%	1/10W 1/10W 1/8W 1/8W 1/8W			<swi< td=""><td></td><td></td></swi<>		
R395	1-249-441-11	CARBON	100K	5% 5%	1/4W				SWITCH, PUSH (AC POWE	
R398 R399 R1301 R1302	1-216-081-00 1-216-081-00 1-216-065-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 22K 4.7K 47K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W		į	************ 1-629-719-23	F1 BOARD *******	**********
R1304 R1305	1-216-097-00 1-216-073-00	METAL GLAZE	100K 10K	5% 5%	1/10W 1/10W			<cap< td=""><td>ACITOR></td><td></td></cap<>	ACITOR>	
R1306 R1307 R1308	1-216-047-00 1-216-053-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE	820 1.5K 10K	5%% 5%% 5%% 5%%	1/10W 1/10W 1/10W		C1601A C1602A	1-136-518-11 1-136-519-11	FILM 0.33MF FILM 0.47MF CERAMIC 0.0047MF	20% 300V 20% 300V
R1309	1-216-029-00 1-216-045-00	METAL GLAZE	150 680	5% 5%	1/10W 1/10W		1 6160420	1-162-578-51 1-162-578-51 1-162-578-51	CERAMIC 0.0047MF	20% 400V 20% 400V
R1311 R1312	1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE	10K 10K	5% 5% 5% 5%	1/10W 1/10W 1/10W		C1606 ∆	1-162-578-51	CERAMIC 0.0047MF	20% 400V
	1-216-053-00 1-216-053-00	METAL GLAZE	1.5K 1.5K		1/10W 1/10W		€16074	1-161-964-61	CERAMIC 0.0047MF	250V
R1325 R1701	1-216-083-00 1-216-296-00	METAL GLAZE METAL GLAZE	27K 0	5% 5% 5% 5%	1/10W 1/8W				NECTOR>	
R1702 R1703	1-216-296-00 1-216-295-00	METAL GLAZE METAL GLAZE	0	5% 5%	1/8W 1/10W		F64 *	1-506-348-99	PIN, CONNECTOR 4P PIN, CONNECTOR 3P PIN, CONNECTOR (5MM P	1 ተ ሮሀ\ 3D
R1704 R1705	1-216-296-00 1-216-295-00	METAL GLAZE METAL GLAZE	0	5% 5%	1/8W 1/10W		F66 *	1-508-786-00	PIN, CONNECTOR (5MM P PIN, CONNECTOR 4P	ITCH) 2P
R1706 R1707 R1708	1-216-296-00 1-216-295-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0	5% 5% 5% 5% 5%	1/8W 1/10W 1/8W			<fus< td=""><td>F></td><td></td></fus<>	F>	
R1709	1-216-296-00	METAL GLAZE	0		1/8W		F1601 ♠	1-576-041-11	FUSE, GLASS-TUBE (TIM	E-LAG) 4A/250V
R1711 R1712	1-216-296-00 1-216-296-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0	5% 5% 5% 5%	1/8W 1/8W 1/10W			1-533-087-00	HOLDER, FUSE; F1601	
R1713	1-216-296-00	METAL GLAZE	0		1/8W		1.P.tcot A		NSFORMER>	n en geologiste kussend (1865), bl. end 1872 f
R1715 R1716	1-216-296-00 1-216-295-00 1-216-295-00		0 0 0	5% 5% 5% 5%	1/8W 1/10W 1/10W		LF1602A	1-421-776-11 1-421-776-11 1-421-592-11	LFT LFT Transformer, Ferrite	
R1717 R1718	1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE	0 0	5% 5%	1/8W 1/8W				ISTOR>	1
R1720	1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE	0	5% 5%	1/10W 1/10W		R1601 ∆			X 1.4 0
R1721	1-216-295-00	METAL GLAZE	0	5%	1/10W		K 1003/A	1-244-945-91 1-217-328-11 1-247-855-91		UX - F W - F - F
		IABLE RESISTO							CARBON 10K 5 METAL GLAZE 8.2M 5	
RV331	1-238-009-11	RES, ADJ, CAI	RBON 22	20			! !	<the< td=""><td>RMISTOR></td><td></td></the<>	RMISTOR>	
	<tra< td=""><td>NSFORMER></td><td></td><td></td><td></td><td></td><td>THP6014</td><td>1-808-059-31</td><td>THERMISTOR, POSITIVE</td><td>And the second s</td></tra<>	NSFORMER>					THP6014	1-808-059-31	THERMISTOR, POSITIVE	And the second s
T331	1-404-584-11	COIL					•		**************************************	*************
	< CRY	STAL>							C BOARD, COMPLETE	
X331 X332		OSCILLATOR, OSCILLATOR, O	CRYSTAL	•	******	*******	*		COVER (REAR LID), CV COVER (MAIN), CV SPRING	
	*1-630-633-23	F3 BOARD	e e e e e e e e e e					<con< td=""><td>NECTOR></td><td></td></con<>	NECTOR>	
		******					C71 * C72 *	1-506-371-00 1-568-881-51	PIN, CONNECTOR 2P PIN, CONNECTOR 6P	
	<con< td=""><td>NECTOR></td><td></td><td></td><td></td><td></td><td>C81 *</td><td>1-560-123-00</td><td>PLUG, CONNECTOR (2.5M PIN, CONNECTOR (5MM P</td><td></td></con<>	NECTOR>					C81 *	1-560-123-00	PLUG, CONNECTOR (2.5M PIN, CONNECTOR (5MM P	



REF.NO. PART NO.	DESCRIPTIO	N -		REMARK	REF.NO.	PART NO.	DESCRIPTION				REMARK
×.0	.PACITOR>				R713 R714	1-215-471-00 1-215-923-00	METAL METAL OXIDE	120K 10K	1% 5%	1/6W 3W	F
C703 1-102-980-0 C704 1-102-116-0 C705 1-102-978-0 C706 1-102-116-0 C707 1-162-116-0	CERAMIC CERAMIC CERAMIC CERAMIC	270PF 680PF 220PF 680PF 680PF	5% 10% 5% 10%	50V 50V 50V 50V 2KV	R715 R716 R717 R718 R719	1-249-415-11 1-202-814-11	SOLID CARBON CARBON SOLID CARBON	3.3K 220 680 33K 47	10% 5% 5% 10% 5%	1/2W 1/4W 1/4W 1/2W 1/4W	
C708 1-162-114-0 C709 1-102-116-0 C710 1-123-147-0 C711 1-101-880-0 C712 1-102-980-0	CERAMIC CERAMIC ELECT CERAMIC	0.0047MF 680PF 10MF 47PF 270PF	10% 20% 5% 5%	2KV 50V 250V 50V 50V	R720 R721 R722 R723 R724	1-249-423-11 1-202-842-11 1-202-848-00 1-249-417-11 1-202-846-00	CARBON SOLID SOLID CARBON SOLID	3.3K 220K 680K 1K 470K	5% 10% 10% 5% 10%	1/4W 1/2W 1/2W 1/4W 1/2W	
C714 1-124-360-C C716 1-162-622-1 C717 1-102-114-C C718 1-102-114-C C719 1-102-114-C	DELECT CERAMIC CERAMIC CERAMIC	1000MF 330PF 470PF 470PF 470PF	20% 10% 10% 10%	16V 6.3KV 50V 50V 50V	R725 R726 R727 R728 R729	1-202-838-00 1-202-824-00 1-249-409-11 1-216-347-11 1-249-416-11	SOLID SOLID CARBON METAL OXIDE CARBON	100K 3.3K 220 0.68 820	10% 10% 5% 5% 5%	1/2W 1/2W 1/4W 1W 1/4W	F
<[IODE> 4 DIODE RD9.1				R730 R731 R732 R733 R734	1-249-415-11	CARBON CARBON CARBON CARBON CARBON	47 3.3K 680 680 100	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W	
D702 8-719-911-1 D703 8-719-911-1 D704 8-719-911-1 D705 8-719-911-1	O DIODE 18811 O DIODE 18811 O DIODE 18811	[9 [9 [9			R735 R736 R737 R739	1-215-493-00 1-215-923-00 1-215-485-00 1-249-417-11	METAL OXIDE METAL	1 M 10 K 470 K 1 K	1% 5% 1% 5%	1/6W 3W 1/6W 1/4W	F
D706 8-719-911-1 D707 8-719-911-1 D708 8-719-911-1 D709 8-719-911-1 D710 8-719-911-1	9 DIODE 1SS11 9 DIODE 1SS11 9 DIODE 1SS11	19 19 19			RV701	1-230-641-11	TABLE RESISTOR	TAL GLA	ZE 2.2	ZM	
	3 DIODE RU-3/ 9 DIODE 1SS1				RV703	1-230-619-11 1-237-749-11 1-237-749-11	RES, ADJ, CAI	RBON 22	00)M	
<.	ACK>					************ *1-630-852-11		******	*****	*****	******
	1 SOCKET, PIO	CTURE TUBE			 		******				
	OIL>	22111			C5005		PACITOR>	0.033M	c	10%	250V
<'	1 INDUCTOR RANSISTOR>	33UH			1 C5006	1-106-379-12 1-124-499-11 1-106-363-00 1-102-106-00 1-124-910-11	ELECT MYLAR CERAMIC	1MF 0.0068 100PF 47MF		20% 10% 10% 20%	50V 400V 50V 50V
Q702 8-729-119- Q703 8-729-326- Q704 8-729-200- Q705 8-729-119- Q706 8-729-326-	1 TRANSISTOR 7 TRANSISTOR 8 TRANSISTOR	2SA1091 2SC2785-HFE			C5028 C5029 C5042 C5043 C5044	1-106-383-00 1-124-910-11 1-108-704-11 1-106-228-00 1-124-120-11	MYLAR ELECT MYLAR MYLAR ELECT	0.047M 47MF 0.1MF 0.22MF 220MF		10% 20% 10% 10% 20%	100V 50V 200V 100V 25V
Q707 8-729-200- Q708 8-729-119- Q709 8-729-326- Q710 8-729-200-	8 TRANSISTOR 1 TRANSISTOR	2SC2785-HFE 2SC2611	,		C5047 C5050	1-102-244-00 1-124-120-11	CERAMIC ELECT	220PF 220MF		10% 20%	500V 25V
<	ESISTOR>				DF013	<d10< td=""><td></td><td></td><td></td><td></td><td></td></d10<>					
R704 1-215-923- R705 1-202-824- R706 1-249-409- R707 1-249-412- R708 1-249-401-	O SOLID 1 CARBON 1 CARBON	E 10K 5% 3.3K 10 220 5% 390 5% 47 5%)% 1/2W 1/4W		D1-4	*1-568-879-61	NNECTOR>	OR 4P	n n t m c'	1) 40	
R709 1-202-844- R710 1-215-465- R712 1-249-417-	O METAL	330K 10 68K 11 1K 52	(1/6W			*1-508-766-00 *1-568-882-71			PITC	1) 41	

REF.NO. PART NO.	DESCRIPTION				REMARK	REF.NO.	PART NO.	DESCRIPTION	!			REMARK																																																																																							
<1C> 1C5001 8-759-103-93 1C5004 8-759-280-12 *4-368-683-01	IC UPC393C IC TA78012AP	04				Q751 Q752 Q753 Q754	8-729-119-78 8-729-119-78 8-729-140-97 8-729-140-96	TRANSISTOR 2	!SC2785-} !SB734-34	ife I																																																																																									
<c01< td=""><td>L></td><td></td><td></td><td></td><td></td><td>1</td><td><res< td=""><td>ISTOR></td><td></td><td></td><td></td><td></td></res<></td></c01<>	L>					1	<res< td=""><td>ISTOR></td><td></td><td></td><td></td><td></td></res<>	ISTOR>																																																																																											
L5002 1-410-093-11 L5005 1-459-074-00 L5006 1-459-592-11 L5007 1-459-941-12	COIL, DUST COI COIL (WITH CO	ORE) (PN	H (HCC)		R751 R752 R753 R754 R755	1-249-418-11 1-249-426-11 1-249-414-11 1-249-434-11 1-249-405-11	CARBON CARBON CARBON CARBON CARBON	1.2K 5.6K 560 27K 100	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W																																																																																								
<tra 95002 8-729-119-78 95019 8-729-140-96 95020 8-729-208-72</tra 	TRANSISTOR 2	SD774-34	4			R756 R757 R758 R760 R761	1-249-419-11 1-249-405-11 1-249-409-11 1-249-411-11 1-249-429-11	CARBON CARBON CARBON CARBON CARBON	1.5K 100 220 330 10K	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W																																																																																								
	ISTOR>	10K	5%	1/4W		R762 R763 R764 R765		CARBON CARBON CARBON CARBON	470K 10K 4.7 4.7	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W	F F																																																																																							
R5012 1-249-421-11 R5013 1-249-435-11 R5014 1-249-429-11 R5015 1-249-421-11	CARBON CARBON CARBON CARBON	2.2K 33K 10K 2.2K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W		R766 R767 R768 R769	1-247-753-11 1-247-751-11 1-215-887-00	CARBON CARBON METAL OXIDE FUSIBLE	1.2K 820 150 220	5% 5% 5% 5%	1/2W 1/2W 2W 1/4W	F F																																																																																							
R5016 1-249-421-11 R5017 1-249-417-11 R5018 1-249-429-11 R5019 1-249-441-11 R5020 1-249-429-11	CARBON CARBON CARBON CARBON CARBON	2.2K 1K 10K 100K 100K	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W		R770	1-212-936-00	FUSTBLE NECTOR>	1.2	5%	1/2W																																																																																								
R5061 1-216-476-11 R5067 1-215-908-00 R5068 1-249-417-11 R5093 1-249-429-11	METAL OXIDE	180 33 1K 10K	5% 5% 5%	3W 3W 1/4W 1/4W	F F	VM88	*1-568-878-81 *1-568-879-61	PIN, CONNECT	OR 4P	****	*****	******																																																																																							
R5094 1-215-911-11 R5095 1-249-425-11 R5602 1-216-476-11	CARBON	100 4.7K 180	5% 5% 5%	3W 1/4W 3W	F F	*A-1345-858-A D BOARD, COMPLETE *********** *4-341-751-01 EYELET *4-341-752-01 EYELET																																																																																													
<tr <="" td=""><td>NSFORMER></td><td></td><td></td><td></td><td></td><td></td><td>*4-368-683-01</td><td>SPRING (Q608</td><td>3)</td><td></td><td></td><td></td></tr> <tr><td>T5001 1-413-059-00</td><td>ŕ</td><td></td><td>,</td><td></td><td></td><td>COOF</td><td></td><td>ACITOR></td><td></td><td></td><td>108/</td><td>5011</td></tr> <tr><td>**************************************</td><td></td><td>******</td><td>*****</td><td>*****</td><td>*******</td><td>C005 C007 C008 C009 C010</td><td>1-102-074-00 1-106-383-00 1-101-880-00 1-101-884-00 1-124-122-11</td><td>CERAMIC MYLAR CERAMIC CERAMIC ELECT</td><td>0.001MF 0.047MF 47PF 56PF 100MF</td><td></td><td>10% 10% 5% 5% 20%</td><td>50V 100V 50V 50V 50V</td></tr> <tr><td><cai< td=""><td>PACITOR></td><td></td><td></td><td></td><td></td><td>C011 C012</td><td>1-101-004-00</td><td>CERAMIC ELECT</td><td>0.01MF 100MF</td><td></td><td>20%</td><td>50V 50V</td></cai<></td></tr> <tr><td>C751 1-101-361-00 C752 1-106-373-00 C753 1-106-367-00 C754 1-102-980-00</td><td>CERAMIC MYLAR MYLAR CERAMIC</td><td>150PF 0.018M 0.01MF 270PF</td><td>F</td><td>5% 10% 10% 5%</td><td>50V 250V 400V 50V</td><td>C012 C013 C015 C016</td><td>1-124-122-11 1-101-004-00 1-124-910-11 1-101-004-00</td><td>CERAMIC ELECT CERAMIC</td><td>0.01MF 47MF 0.01MF</td><td></td><td>20%</td><td>50V 50V 50V</td></tr> <tr><td>C757 1-108-692-11 C759 1-123-875-11 C760 1-124-917-11 C761 1-101-006-00</td><td>MYLAR ELECT ELECT CERAMIC</td><td>0.01MF 10MF 33MF 0.047MI</td><td>F</td><td>10% 20% 20%</td><td>200V 50V 50V 50V 400V</td><td>C017 C018 C019 C020 C021</td><td>1-123-875-11 1-102-980-00 1-106-383-00 1-102-973-00 1-102-973-00</td><td>ELECT CERAMIC MYLAR CERAMIC CERAMIC</td><td>10MF 270PF 0.047MF 100PF 100PF</td><td>ì</td><td>20% 5% 10% 5% 5%</td><td>50V 50V 100V 50V 50V</td></tr> <tr><td></td><td colspan="6">C762 1-106-367-00 MYLAR 0.01MF 10% C01L> L751 1-408-413-00 INDUCTOR 22UH</td><td>1-124-910-11 1-124-499-11 1-124-499-11 1-102-125-00</td><td>ELECT ELECT ELECT CERAMIC</td><td>47MF 1MF 1MF 0.0047N</td><td></td><td>20% 20% 20% 10%</td><td>50V 50V 50V 50V 50V</td></tr> <tr><td>1751 1-408-413-00 <tr <="" td=""><td></td><td>C026 C027 C028</td><td>1-102-125-00 1-106-220-00 1-101-361-00</td><td>CERAMIC MYLAR CERAMIC</td><td>0.0047N 0.1MF 150PF</td><td>ir</td><td>10% 10% 5%</td><td>100V 50V</td></tr></td></tr>	NSFORMER>						*4-368-683-01	SPRING (Q608	3)				T5001 1-413-059-00	ŕ		,			COOF		ACITOR>			108/	5011	**************************************		******	*****	*****	*******	C005 C007 C008 C009 C010	1-102-074-00 1-106-383-00 1-101-880-00 1-101-884-00 1-124-122-11	CERAMIC MYLAR CERAMIC CERAMIC ELECT	0.001MF 0.047MF 47PF 56PF 100MF		10% 10% 5% 5% 20%	50V 100V 50V 50V 50V	<cai< td=""><td>PACITOR></td><td></td><td></td><td></td><td></td><td>C011 C012</td><td>1-101-004-00</td><td>CERAMIC ELECT</td><td>0.01MF 100MF</td><td></td><td>20%</td><td>50V 50V</td></cai<>	PACITOR>					C011 C012	1-101-004-00	CERAMIC ELECT	0.01MF 100MF		20%	50V 50V	C751 1-101-361-00 C752 1-106-373-00 C753 1-106-367-00 C754 1-102-980-00	CERAMIC MYLAR MYLAR CERAMIC	150PF 0.018M 0.01MF 270PF	F	5% 10% 10% 5%	50V 250V 400V 50V	C012 C013 C015 C016	1-124-122-11 1-101-004-00 1-124-910-11 1-101-004-00	CERAMIC ELECT CERAMIC	0.01MF 47MF 0.01MF		20%	50V 50V 50V	C757 1-108-692-11 C759 1-123-875-11 C760 1-124-917-11 C761 1-101-006-00	MYLAR ELECT ELECT CERAMIC	0.01MF 10MF 33MF 0.047MI	F	10% 20% 20%	200V 50V 50V 50V 400V	C017 C018 C019 C020 C021	1-123-875-11 1-102-980-00 1-106-383-00 1-102-973-00 1-102-973-00	ELECT CERAMIC MYLAR CERAMIC CERAMIC	10MF 270PF 0.047MF 100PF 100PF	ì	20% 5% 10% 5% 5%	50V 50V 100V 50V 50V		C762 1-106-367-00 MYLAR 0.01MF 10% C01L> L751 1-408-413-00 INDUCTOR 22UH						1-124-910-11 1-124-499-11 1-124-499-11 1-102-125-00	ELECT ELECT ELECT CERAMIC	47MF 1MF 1MF 0.0047N		20% 20% 20% 10%	50V 50V 50V 50V 50V	1751 1-408-413-00 <tr <="" td=""><td></td><td>C026 C027 C028</td><td>1-102-125-00 1-106-220-00 1-101-361-00</td><td>CERAMIC MYLAR CERAMIC</td><td>0.0047N 0.1MF 150PF</td><td>ir</td><td>10% 10% 5%</td><td>100V 50V</td></tr>		C026 C027 C028	1-102-125-00 1-106-220-00 1-101-361-00	CERAMIC MYLAR CERAMIC	0.0047N 0.1MF 150PF	i r	10% 10% 5%	100V 50V
NSFORMER>						*4-368-683-01	SPRING (Q608	3)																																																																																											
T5001 1-413-059-00	ŕ		,			COOF		ACITOR>			108/	5011																																																																																							
**************************************		******	*****	*****	*******	C005 C007 C008 C009 C010	1-102-074-00 1-106-383-00 1-101-880-00 1-101-884-00 1-124-122-11	CERAMIC MYLAR CERAMIC CERAMIC ELECT	0.001MF 0.047MF 47PF 56PF 100MF		10% 10% 5% 5% 20%	50V 100V 50V 50V 50V																																																																																							
<cai< td=""><td>PACITOR></td><td></td><td></td><td></td><td></td><td>C011 C012</td><td>1-101-004-00</td><td>CERAMIC ELECT</td><td>0.01MF 100MF</td><td></td><td>20%</td><td>50V 50V</td></cai<>	PACITOR>					C011 C012	1-101-004-00	CERAMIC ELECT	0.01MF 100MF		20%	50V 50V																																																																																							
C751 1-101-361-00 C752 1-106-373-00 C753 1-106-367-00 C754 1-102-980-00	CERAMIC MYLAR MYLAR CERAMIC	150PF 0.018M 0.01MF 270PF	F	5% 10% 10% 5%	50V 250V 400V 50V	C012 C013 C015 C016	1-124-122-11 1-101-004-00 1-124-910-11 1-101-004-00	CERAMIC ELECT CERAMIC	0.01MF 47MF 0.01MF		20%	50V 50V 50V																																																																																							
C757 1-108-692-11 C759 1-123-875-11 C760 1-124-917-11 C761 1-101-006-00	MYLAR ELECT ELECT CERAMIC	0.01MF 10MF 33MF 0.047MI	F	10% 20% 20%	200V 50V 50V 50V 400V	C017 C018 C019 C020 C021	1-123-875-11 1-102-980-00 1-106-383-00 1-102-973-00 1-102-973-00	ELECT CERAMIC MYLAR CERAMIC CERAMIC	10MF 270PF 0.047MF 100PF 100PF	ì	20% 5% 10% 5% 5%	50V 50V 100V 50V 50V																																																																																							
	C762 1-106-367-00 MYLAR 0.01MF 10% C01L> L751 1-408-413-00 INDUCTOR 22UH						1-124-910-11 1-124-499-11 1-124-499-11 1-102-125-00	ELECT ELECT ELECT CERAMIC	47MF 1MF 1MF 0.0047N		20% 20% 20% 10%	50V 50V 50V 50V 50V																																																																																							
1751 1-408-413-00 <tr <="" td=""><td></td><td>C026 C027 C028</td><td>1-102-125-00 1-106-220-00 1-101-361-00</td><td>CERAMIC MYLAR CERAMIC</td><td>0.0047N 0.1MF 150PF</td><td>ir</td><td>10% 10% 5%</td><td>100V 50V</td></tr>		C026 C027 C028	1-102-125-00 1-106-220-00 1-101-361-00	CERAMIC MYLAR CERAMIC	0.0047N 0.1MF 150PF	i r	10% 10% 5%	100V 50V																																																																																											
	C026 C027 C028	1-102-125-00 1-106-220-00 1-101-361-00	CERAMIC MYLAR CERAMIC	0.0047N 0.1MF 150PF	i r	10% 10% 5%	100V 50V																																																																																												

The components identified by shading and mark $\stackrel{\wedge}{\Lambda}$ are critical for safety.
Replace only with part number specified.



	PART NO.				REMARK	REF.NO.	PART NO.	DESCRIPTION			REMARK
C251	1-102-121-00 1-102-953-00 1-124-120-11 1-102-978-00 1-124-927-11	ELECI	0.0022MF 18PF 220MF 220PF 4.7MF	10% 5% 20% 5% 20%	50V 50V 16V 50V 50V	į.	1-102-030-00 1-124-557-11 1-102-030-00 1-124-637-11 1-124-556-11 1-102-074-00		330PF 1000MF 330PF 1000MF 2200MF	10% 20% 10% 20% 20%	500V 25V 500V 50V 16V
C255 C256	1-124-927-11 1-124-122-11 1-124-927-11 1-124-927-11 1-106-220-00	ELECT ELECT MYLAR	4.7MF 100MF 4.7MF 4.7MF 0.1MF	20% 20% 20% 20% 10%	50V 50V 50V 50V 100V	,	1-102-074-00 1-124-347-00 1-124-556-11 1-124-910-11 1-124-122-11 1-124-360-00		0.001MF 100MF 2200MF 47MF 100MF	10% 20% 20% 20% 20% 20%	160V 16V 50V 50V
C260 C265 C266	1-102-074-00	MYLAR MYLAR CERAMIC CERAMIC	0.01MF 0.1MF 0.1MF 0.001MF	10% 10% 10% 10%	50V 100V 100V 50V 50V	:	1-124-360-00 1-123-875-11 1-102-074-00 1-124-927-11 1-102-074-00 1-124-927-11	ELECT CERAMIC ELECT CERAMIC	1000MF 10MF 0.001MF 4.7MF 0.001MF 4.7MF	20% 20% 10% 20% 10% 20%	16V 50V 50V 50V 50V 50V
C501 C502 C503 C504 C505	1-124-927-11 1-124-927-11 1-106-371-00 1-101-361-00 1-108-794-11 1-106-375-12	MYLAR	4.7MF 4.7MF 0.015MF 150PF 0.0015MF	20% 20% 10% 5% 5%	50V 400V 50V 50V 250V		1-124-927-11 1-123-382-00 1-124-913-11 1-102-030-00 1-123-948-00 1-162-114-00		3.3MF 470MF 330PF 22MF 0.0047MF	20% 20% 20% 10% 20%	50V 50V 500V 250V 2KV
C507 C508 C509 C510	1-130-783-00 1-106-375-12 1-106-220-00 1-161-959-00	MYLAR MYLAR MYLAR CERAMIC	0.33MF 0.022MF 0.1MF 22PF 0.0033MF	10% 10% 10% 10%	100V 250V 100V 500V	C806 C807 C810 C811 C812	1-106-220-00 1-106-395-00 1-124-494-00 1-136-541-11 1-124-634-11	MYLAR MYLAR ELECT FILM FIECT	0.1MF 0.15MF 33MF 1.5MF	10% 10% 5% 20%	100V 200V 160V 200V 250V
C513 C514 C515	1-108-798-11 1-106-220-00 1-108-614-11 1-106-228-00 1-124-499-11	MYLAR MYLAR ELECT	0. 1MF 0.001MF 0.22MF 1MF 0.001MF	5% 10% 10% 10% 20%	100V 100V 100V 50V	C813 C814 A C815 C817	1-102-212-00 1-161-731-11 1-136-111-00 1-136-611-11 1-129-722-00	CERAMIC CERAMIC FILM FILM			500V 2KV 200V 1.4KV 630V
C519 C520	1-136-173-00 1-102-121-00	CERAMIC	0.33MF 0.47MF 0.47MF 0.0022MF	20% 20% 5% 10%	100V 50V 50V 50V 50V	C819 ⚠	-1-161-731-11 1-106-218-00 -1-162-116-51 1-102-114-00 1-106-359-00	CERANIC MYLAR	0.001MP	102 102 102 102	2KV 400V 2KV 50V 400V
C521 C522 C523 C524 C525	1-106-220-00 1-124-122-11 1-108-614-11 1-108-798-11 1-102-973-00		0.1MF 100MF 0.001MF 0.0033MF 100PF	10% 20% 10% 5%	100V 50V 100V 50V 50V	1	1-102-212-00 1-106-375-12 1-123-875-11 1-106-375-12		820PF 0.022MF 10MF 0.022MF	10% 10% 10% 20% 10%	500V 250V 50V 250V
C526 C527 C531	1-102-947-00 1-106-220-00 1-124-190-00	CERAMIC MYLAR ELECT	680MF	0.5PF 10% 10%	50V 100V 25V						
C532 C533	1-124-122-11 1-106-216-00	ELECT MYLAR	100MF 0.068MF	20% 10%	50V 100V	CF001 CF501	1-577-082-11 1-567-888-11	VIBRATOR, CE OSCILLATOR,			
C534 C536 C537 C538 C539	1-124-120-11 1-131-365-00 1-124-499-11 1-108-614-11 1-102-820-00	ELECT TANTALUM ELECT MYLAR CERAMIC	220MF 10MF 1MF 0.001MF 330PF	20% 10% 20% 10% 5%	16V 16V 50V 100V 50V		*1-508-765-00			H) 3P	
C591 C592 C593 C601 C602	1-123-875-11 1-124-477-11 1-102-820-00 1-162-599-12 1-162-599-12	ELECT ELECT CERAMIC CERAMIC CERAMIC	10MF 47MF 330PF 0.0047MF 0.0047MF	20% 20% 5%	50V 16V 50V 250V 250V	D2 D21 D23	*1-564-505-11 *1-564-512-11 *1-564-346-00 *1-568-879-71 *1-564-346-00	PLUG, CONNECT PLUG, CONNECTOR, B PIN, CONNECT CONNECTOR, B	TOR 9P Dard to Boari Or 4P		
C603 C604 C605 C606	1-162-599-12 1-125-293-00 1-124-122-11 1-106-220-00	CERAMIC ELECT(BLOCK) ELECT MYLAR	0.0047MF 220MF 100MF 0.1MF	20% 10%	250V 400V 50V 100V	D41 D45 D51 D64	*1-566-367-11 *1-568-881-51 *1-566-367-11 *1-506-348-99	CONNECTOR, H PIN, CONNECT CONNECTOR, H PIN, CONNECT	INGE (RECEPT/ OR 6P INGE (RECEPT/ OR 3P	ACLE)	
C607 C608 C611 C612 C613	1-130-019-00 1-123-875-11 1-124-122-11 1-162-115-00 1-136-539-11	FILM ELECT ELECT CERAMIC FILM	0.0012MF 10MF 100MF 330PF 0.0022MF	5% 20% 20% 10% 3%	50V 50V 50V 2KV 2KV	D84 D86	*1-508-786-00 *1-564-038-00 *1-508-766-00 *1-568-882-71	PIN, CONNECT CONNECTOR PL PIN, CONNECT PIN, CONNECT	UG, DY (MINI) OR (5MM PITC	6P	




The components identified by shading and mark \bigwedge are critical for safety.

Replace only with part number specified.

REF.NO. PART		CRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
	<diode></diode>	~~~~~~		I C 251	8-759-803-31	IC LA4280	
D002 8-719 D003 8-719 D004 8-719 D005 8-719	9-911-19 DIODI 9-109-71 DIODI	E 1SS119 E 1SS119 E 1SS119 E RD3.9ES-B1		IC501 IC502 IC601	8-759-946-23	IC TEA2028B IC TDA8170 HOLDER, IC: IC502	
D008 8-719 D009 8-719 D011 8-719	9-911-19 DIODI	E RD5.6ES-B2 E RD36ES-B4 E RD5.6ES-B2 E 1SS119 E 1SS119		ŀ	8-759-280-12 <coi< td=""><td>IC TA78012AP</td><td></td></coi<>	IC TA78012AP	
D255 8-719 D256 8-719 D501 8-719	9-000-12 DIOD! 9-000-12 DIOD! 9-911-19 DIOD!	E RD9.1ES-B3 E MC931 E MC931 E 1SS119 E U05G		L001 L501 L601 L602 L603	*1-420-872-00 1-410-396-41	INDUCTOR 27UH INDUCTOR 3.3UH COIL, AIR CORE FERRITE BEAD INDUCTOR FERRITE BEAD INDUCTOR	
D508 8-719 D509 8-719 D511 8-719	9-000-12 DIOD 9-911-19 DIOD 9-911-19 DIOD 9-911-55 DIOD 9-911-55 DIOD	E 188119 E 188119		L605 L606 L607 L801 L803	1-421-013-00 1-408-421-00 1-459-111-00	COIL (WITH CORE) COIL (HORIZONTAL CHOKE) 25UH INDUCTOR 100UH COIL, DRAM CORE (CDI) COIL, DUST CORE	
D591 8-719 D592 8-719 D601 8-719	9-109-81 DIOD 9-911-19 DIOD 9-911-19 DIOD 9-946-90 DIOD 9-300-33 DIOD	E 1SS119 E 1SS119 E KBU4JL-6088		L804 L805 L806 L807 L809	1-459-907-11 1-459-111-00 1-407-504-00	INDUCTOR 4.7MMH COIL, HORIZONTAL LINEARITY COIL, DRAM CORE (CDI) INDUCTOR 10MMH COIL, AIR CORE	
D604 8-719 D605 8-719 D606 8-719		E UO5G E UO5G E RU-3AM	; ;	L810 L811	1-459-406-00	TRANSFORMER, FERRITE (PMT) COIL (WITH CORE) LINK>	
D609 8-719 D610 8-719 D611 8-719	9-901-58 DIOD 9-901-58 DIOD 9-300-59 DIOD 9-900-26 DIOD 9-300-59 DIOD	E RGP15J E CTU-12S E ERD29-08J		PS6014 PS6024		LINK, IC 2A LINK, IC 1.5A	4. 3億基礎也 21. 複子模字
D614 8-719 D615 8-719 D616 8-719	9-901-58 DIOD 9-901-58 DIOD 9-109-90 DIOD 9-109-93 DIOD 9-109-89 DIOD	E RGP15J E RD5.6ES-B3 E RD6.2ES-B2		Q002 Q003 Q004 Q005 Q252	8-729-119-76 8-729-119-76 8-729-119-78	TRANSISTOR 2SA1175-HFE TRANSISTOR 2SA1175-HFE TRANSISTOR 2SA1175-HFE TRANSISTOR 2SC2785-HFE TRANSISTOR DTC124ES	
D622 8-71 D623 8-71 D627 8-71	9-911-19 DIOD 9-911-19 DIOD	E MC931 E 1SS119 E 1SS119 E 1SS119 E RD15ES-B1		Q501 Q502 Q505 Q506 Q507	8-729-119-76 8-729-140-96 8-729-140-97	TRANSISTOR 2SA1175-HFE TRANSISTOR 2SA1175-HFE TRANSISTOR 2SD774-34 TRANSISTOR 2SB734-34 TRANSISTOR 2SA1175-HFE	
D633 8-71 D801 8-71 D802 8-71	9-911-19 DIOD 9-300-33 DIOD 9-300-33 DIOD	E RD10ES-B1 E 1SS119 E RU-3AM E RU-3AM E ES1F		Q591 Q598 Q602 Q603		TRANSISTOR 2SC2785-HFE TRANSISTOR 2SC2785-HFE TRANSISTOR 2SD1548-LB SPRING; Q602 TRANSISTOR 2SB1357-EF	
D805 8-719 D806 8-719 D807 8-719	9-911-55 DIOD 9-945-80 DIOD 9-945-80 DIOD	E U05G E U05G E ERC06-15S E ERC06-15S E ERD29-08J		9604 9605 9606 9607 9609	8-729-119-78 8-729-119-78 8-729-109-53	TRANSISTOR 2SD789-34 TRANSISTOR 2SC2785-HFE TRANSISTOR 2SC2785-HFE TRANSISTOR 2SD795A TRANSISTOR 2SD789-34	
D809 8-71	9-901-58 DIOD	E RGP15J		Q801 Q804	8-729-119-78 8-729-304-50 *4-368-683-01	TRANSISTOR 2SC2785-HFE TRANSISTOR 2SD1941-06 SPRING; Q804	
	<ic> 9-632-91 IC M 9-986-89 IC M</ic>	50436-710SP B88503H-1106G		Q805	8-729-119-80	TRANSISTOR 2SC2688-LK	
	9-603-41 IC M		ļ		\ne3)	101011/	



REF.NO.	PART NO.	DESCRIPTION				REMARK	REF.NO.	PART NO.	DESCRIPTION				REMARK
R001 R002 R003 R004	1-249-417-11 1-249-417-11 1-249-417-11 1-249-417-11	CARBON CARBON CARBON	1 K 1 K 1 K 1 K	5% 5% 5%	1/4W 1/4W 1/4W 1/4W		R253 R255 R256	1-249-413-11 1-249-385-11 1-249-385-11	CARBON CARBON	470 2.2 2.2	5% 5% 5%	1/4W 1/4W 1/4W	
R008 R009 R010 R011	1-249-417-11 1-249-417-11 1-249-413-11 1-249-417-11	CARBON CARBON CARBON CARBON	1K 1K 470 1K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W		R260 R261 R262 R263	1-249-393-11 1-249-429-11 1-249-413-11 1-249-421-11	CARBON CARBON CARBON	10 10K 470 2.2K	5% 5% 5%	1/4W 1/4W 1/4W	
R012 R013 R017 R023	1-249-417-11 1-249-417-11 1-249-417-11 1-249-429-11	CARBON CARBON CARBON CARBON	1 K 1 K 1 K 1 O K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W		R264 R265 R266 R500	1-249-421-11 1-249-425-11 1-249-425-11 1-247-897-11	CARBON CARBON CARBON CARBON	2.2K 4.7K 4.7K 560K	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W	
R024 R031 R032 R033	1-249-429-11 1-249-429-11 1-249-417-11 1-249-413-11	CARBON CARBON CARBON CARBON	10K 10K 1K 470	5% 5% 5%	1/4W 1/4W 1/4W 1/4W		R501 R502 R503 R504 R505	1-249-413-11 1-249-409-11 1-249-410-11 1-215-427-00 1-249-431-11	CARBON CARBON CARBON METAL CARBON	470 220 270 1.8K 15K	5% 5% 5% 1% 5%	1/4W 1/4W 1/4W 1/6W 1/4W	
R034 R035 R036 R037	1-249-413-11 1-249-431-11 1-249-421-11 1-249-417-11	CARBON	470 15K 2.2K 1K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W		R506 R509 R510 R511	1-249-428-11 1-249-424-11 1-249-426-11 1-249-429-11		8.2K 3.9K 5.6K 10K		1/4W 1/4W 1/4W 1/4W	
R038 R044 R045 R046 R048	1-249-417-11 1-249-429-11 1-249-417-11 1-249-429-11 1-249-417-11	CARBON CARBON CARBON CARBON CARBON	1 K 1 O K 1 K 1 O K 1 K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W		R513 R515 R516 R517	1-249-429-11 1-249-423-11 1-249-408-11 1-249-429-11	CARBON CARBON CARBON CARBON	10K 3.3K 180 10K		1/4W 1/4W 1/4W 1/4W	
R049 R050 R051 R052	1-249-417-11 1-249-433-11 1-249-429-11 1-249-439-11	CARBON CARBON CARBON CARBON	1K 22K 10K 68K	5% 5% 5%	1/4W 1/4W 1/4W 1/4W		R518 R519 R520 R521	1-249-437-11 1-249-433-11 1-249-411-11 1-249-405-11	CARBON CARBON CARBON CARBON	47K 22K 330 100	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W	
R053 R056 R057 R058		CARBON CARBON	47K 82K 220 220	5% 5% 5%	1/4W 1/4W 1/4W		R522 R523 R524 R525	1-215-469-00 1-249-417-11 1-249-421-11 1-249-417-11	METAL CARBON CARBON CARBON	100K 1K 2.2K	5% 5%	1/6W 1/4W 1/4W 1/4W	
R059 R060 R062 R063	1-249-437-11 1-249-436-11 1-249-411-11 1-249-431-11	CARBON CARBON	47K 39K 330 15K	5% 5% 5%	1/4W 1/4W 1/4W 1/4W		R526 R527 R528 R529	1-249-409-11 1-249-429-11 1-249-408-11 1-249-427-11	CARBON CARBON CARBON CARBON	220 10K 180 6.8K	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W	
R064 R068 R069	1-249-421-11 1-249-423-11 1-249-417-11	CARBON CARBON CARBON	10K 2.2K 3.3K 1K 1K		1/4W 1/4W 1/4W		R530 R531 R532 R534 R536		CARBON	1.2 150K 1K 820K 2.2M	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W	F
R073 R075	1-249-417-11 1-249-417-11 1-249-417-11 1-249-417-11	CARBON CARBON CARBON	1 K 1 K 1 K	5% 5% 5%	1/4W 1/4W 1/4W 1/4W		R538 R539 R540	1-249-434-11 1-247-883-00 1-247-883-00 1-249-399-11	CARBON CARBON CARBON	27K 150K 150K 33	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W	
R077 R078 R079 R080 R081	1-249-413-11 1-249-423-11 1-249-435-11 1-249-429-11 1-249-441-11	CARBON CARBON CARBON CARBON CARBON	470 3.3K 33K 10K 100K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W		R541 R542 R543 R544	1-249-438-11 1-249-425-11 1-249-451-11 1-247-745-11	CARBON CARBON CARBON CARBON	56K 4.7K 2.2 330	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/2W	
R083 R084 R085 R086 R087	1-249-429-11 1-249-413-11 1-249-429-11 1-249-417-11	CARBON CARBON CARBON CARBON	10K 470 10K 1K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W		R545 R546 R547 R548	1-249-433-11 1-249-436-11 1-249-423-11 1-216-349-00	CARBON CARBON CARBON METAL OXIDE	22K 39K 3.3K	5% 5%		F
R088 R090 R091	1-249-417-11 1-249-425-11 1-249-413-11 1-249-409-11	CARBON CARBON CARBON CARBON	1K 4.7K 470 220	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W		R549 R550 R551	1-216-454-11 1-249-440-11 1-249-749-00 1-216-869-11	METAL OXIDE CARBON CARBON METAL OXIDE	390 82K 2.2M	5% 5% 5% 5%	1/4W 1/4W 1W	F
R093 R094 R097 R098	1-249-429-11 1-249-429-11 1-249-429-11 1-249-429-11	CARBON CARBON CARBON CARBON	10K 10K 10K 10K	5% 5%	1/4W 1/4W 1/4W 1/4W		R554 R555 R556 R557	1-249-411-11 1-249-749-00 1-249-405-11 1-249-425-11	CARBON CARBON CARBON CARBON	330 2.2M 100 4.7K	5% 5% 5%	1/4W 1/4W 1/4W 1/4W	
R251 R252	1-249-417-11 1-249-413-11	CARBON CARBON	1 K 470	5% 5%	1/4W 1/4W		R558 R559	1-247-895-00 1-249-427-11	CARBON CARBON	470K 6.8K	5% 5%	1/4W 1/4W	

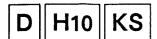

The components identified by shading and mark A are critical for safety.

Replace only with part number specified.

u.

REF.NO.	PART NO.	DESCRIPTION				REMARK	REF.NO.	PART NO.	DESCRIPTION				REMARK
R560 R591 R592 R593 R594	1-249-411-11 1-249-427-11 1-249-429-11 1-249-429-11 1-249-424-11	CARBON CARBON CARBON CARBON CARBON	330 6.8K 10K 10K 3.9K	5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W		R829 R830 R831 R832 R1001	1-249-411-11 1-249-429-11 1-249-451-11 1-216-379-11 1-249-421-11	CARBON CARBON CARBON METAL OXIDE CARBON		% 1 % 1	/4W /4W /4W 2W /4W	F
R595 R596 R597 R602 R603	1-249-417-11 1-249-425-11 1-249-425-11 1-216-465-11 1-216-359-00	CARBON CARBON CARBON METAL OXIDE METAL OXIDE	1K 4.7K 4.7K 27K 6.8	5% 5% 5%	1/4W 1/4W 1/4W 2W 1W	F F	R1002 R1006 R1007 R1011	1-247-719-11 1-249-408-11 1-249-408-11 1-249-413-11 1-249-405-11	CARBON CARBON CARBON CARBON CARBON CARBON	3.3K 5	% % %	/4W /4W /4W /4W	
R604 R605 R606 R607 R608	1-249-414-11 1-215-469-00 1-215-442-00 1-249-434-11 1-216-490-11	CARBON METAL METAL CARBON METAL OXIDE	560 100K 7.5K 27K 39K	5% 1% 1% 5% 5%	1/4W 1/6W 1/6W 1/4W 3W	F	R5502 R5503 R5504	1-249-425-11 1-249-429-11 1-249-417-11 1-249-389-11 1-247-903-00	CARBON CARBON CARBON CARBON CARBON	10K 5 1K 5 4.7	% %	/4W /4W /4W /4W	
R609 R610 R611 R612 R613	1-249-401-11 1-249-385-11 1-249-385-11 1-207-905-00 1-249-401-11	CARBON CARBON CARBON WIREWOUND CARBON	47 2.2 2.2 0.27 47	5% 5% 5% 10% 5%	1/4W 1/4W 1/4W 2W 1/4W	F F			CARBON LABLE RESISTO	R>		1/4W	
R614 R616 R617 R618 R619	1-205-758-11 1-249-417-11 1-249-411-11 1-216-431-11 1-249-429-11	WIREWOUND CARBON CARBON METAL OXIDE CARBON	100 1K 330 560 10K	10% 5% 5% 5% 5%	10W 1/4W 1/4W 1W 1/4W	F	RV501 RV502	1-238-013-11 1-238-016-11 <spa< td=""><td>RES, ADJ, CA RES, ADJ, CA RK GAP></td><td>RBUN 2.2K RBON 10K</td><td></td><td></td><td></td></spa<>	RES, ADJ, CA RES, ADJ, CA RK GAP>	RBUN 2.2K RBON 10K			
R620 R621 R622 R623 R624	1-249-433-11 1-249-431-11 1-249-429-11 1-249-377-11 1-249-411-11	CARBON CARBON CARBON CARBON CARBON	22K 15K 10K 0.47 330	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W	F	T601 A	\.1-448-961-21	NSFORMER>				1.00 · 医含色
R625 R626 R628 R629 R630	1-215-865-11 1-249-411-11 1-249-393-11 1-249-411-11 1-249-437-11	METAL OXIDE CARBON CARBON CARBON CARBON	220 330 10 330 47K	5% 5% 5% 5%	1W 1/4W 1/4W 1/4W 1/4W		T801 T802 A	1-424-011-11 1-437-090-00 3-1-439-418-41	HDT TRANSFORMER	assy, fl'			
R633 R636 R642 R643 R647	1-249-405-11 1-249-429-11 1-216-343-00 1-217-192-21 1-216-485-11	CARBON CARBON METAL OXIDE WIREWOUND METAL OXIDE	100 10K 0.33 0.22 5.6K	5% 5% 5% 10% 5%	1/4W 1/4W 1W 2W 3W	f F F	t 		**********				
R648 R649 R650 R651 R652	1-216-485-11 1-249-385-11 1-249-417-11 1-249-405-11 1-247-903-00	METAL OXIDE CARBON CARBON CARBON CARBON	5.6K 2.2 1K 100 1M	5% 5% 5% 5%	3W 1/4W 1/4W 1/4W 1/4W	F	H101 S1401	*1-564-521-11 <swi 1-554-937-11</swi 	TCH>	BOARD			
R653 R802 R805 R806 R807	1-205-758-11 1-249-443-11 1-249-448-11 1-249-439-11 1-216-869-11	WIREWOUND CARBON CARBON CARBON METAL OXIDE	100 0.47 1.2 68K 1K	10% 5% 5% 5% 5%	10W 1/4W 1/4W 1/4W 1W	F F	\$1402 \$1403 \$1404 \$1405	1-554-937-11 1-554-937-11 1-554-937-11 1-554-937-11	SWITCH, KEY SWITCH, KEY SWITCH, KEY SWITCH, KEY	BOARD BOARD BOARD	*****	****	******
R809 R810 R811 R812 R815	1-202-821-11 1-202-818-00 1-215-882-00 1-249-494-11 1-215-884-11	SOLID SOLID METAL OXIDE CARBON METAL OXIDE	1.8K 1K 22 68K 47	10% 10% 5% 5%	1/2W 1/2W 2W 1/2W 2W	F F		*1-629-781-22 <cap< td=""><td>KS BOARD ********</td><td></td><td></td><td></td><td></td></cap<>	KS BOARD ********				
R816 R817 R820 R821 R822	1-215-868-00 1-249-417-11 1-249-403-11 1-247-725-11 1-217-778-11	METAL OXIDE CARBON CARBON CARBON FUSIBLE	680 1K 68 10K 1K	5% 5% 5% 5%	1W 1/4W 1/4W 1/4W 1W	F	C202 C204 C213 C214 C217	1-124-902-00 1-124-902-00 1-126-233-11 1-106-363-00 1-106-363-00	ELECT ELECT ELECT MYLAR MYLAR	0.47MF 0.47MF 22MF 0.0068MF 0.0068MF	2 2 7 1	07 07 07 07 07	50V 50V 50V 400V 400V
R825 R826 R827 R828	1-216-342-11 1-249-441-11 1-249-429-11 1-249-423-11	METAL OXIDE CARBON CARBON CARBON	0.27 100K 10K 3.3K	5% 5% 5% 5%	1W 1/4W 1/4W 1/4W	F	C218 C219 C220 C221	1-106-375-12 1-106-375-12 1-108-620-11 1-108-620-11	MYLAR MYLAR MYLAR MYLAR	0.022MF 0.022MF 0.0033MF 0.0033MF	1	0% 0% 0%	250V 250V 100V 100V

KS	J 3	J1
_		

REF.NO. PART NO.	DESCRIPTION	N -		REMARK	REF.NO.	PART NO.	DESCRIPTION	į		REMARK
C222 1-106-385-00 C223 1-106-385-00 C224 1-106-367-00 C225 1-136-173-00 C226 1-136-173-00	MYLAR MYLAR MYLAR FILM FILM	0.056MF 0.056MF 0.01MF 0.47MF 0.47MF	10% 10% 10% 5%	100V 100V 400V 50V 50V	J33 J342	<00N *1-564-519-11 *1-564-519-11	NECTOR> PLUG, CONNEC PLUG, CONNEC	TOR 4P TOR 4P		
C227 1-106-375-12 C228 1-106-379-12 C229 1-106-371-00 C230 1-106-371-00 C231 1-124-902-00	MYLAR MYLAR MYLAR MYLAR ELECT	0.022MF 0.033MF 0.015MF 0.015MF 0.47MF	10% 10% 10% 10% 20%	250V 250V 400V 400V 50V	J1401	<jac 1-507-806-00</jac 				
C232 1-123-875-11 C233 1-102-114-00 C234 1-102-114-00 C235 1-102-114-00 C236 1-102-114-00	CERAMIC CERAMIC	10MF 470PF 470PF 470PF 470PF	20% 10% 10% 10% 10%	50V 50V 50V 50V 50V	R1402	<pre></pre>	CARBON METAL OXIDE	470 5 470 5 560 5 560 5	% 1/4W % 1/4W % 1W % 1W	
C237 1-124-902-00 C238 1-102-978-00 C239 1-126-103-11	CERAMIC ELECT	0.47MF 220PF 470MF	20% 5% 20%	50V 50V 16V	 *****	**************************************	*********	******** MPLETE		*******
D205 8-719-110-04 D206 8-719-110-04	DIODE RD7.5 DIODE RD7.5				C1402 C1403 C1404	<cap 1-123-875-11="" 1-126-103-11="" 1-126-163-11<="" 1-163-005-11="" td=""><td>ELECT CERAMIC CHIP ELECT</td><td>4.7MF</td><td>20% 20% 10% 20%</td><td>50V 16V 50V 50V</td></cap>	ELECT CERAMIC CHIP ELECT	4.7MF	20% 20% 10% 20%	50V 16V 50V 50V
1C201 8-759-013-17 <coi *1-562-370-21<="" k21="" td=""><td>NNECTOR></td><td>BOARD TO BOA</td><td>RD 18P</td><td></td><td>C1405 C1406 C1407 C1408 C1409 C1410</td><td>1-126-233-11</td><td>CERAMIC CHIP ELECT ELECT ELECT ELECT ELECT ELECT</td><td>470PF 4.7MF 47MF 100MF 22MF 10MF</td><td>10% 20% 20% 20% 20% 20%</td><td>50V 50V 16V 16V 50V 25V</td></coi>	NNECTOR>	BOARD TO BOA	RD 18P		C1405 C1406 C1407 C1408 C1409 C1410	1-126-233-11	CERAMIC CHIP ELECT ELECT ELECT ELECT ELECT ELECT	470PF 4.7MF 47MF 100MF 22MF 10MF	10% 20% 20% 20% 20% 20%	50V 50V 16V 16V 50V 25V
R204 1-249-435-11 R205 1-249-435-11 R206 1-249-423-11 R207 1-249-423-11	CARBON CARBON	33K 5% 33K 5% 3.3K 5% 3.3K 5% 15K 5%	1/4W 1/4W 1/4W 1/4W		C1412 C1413 C1414		ELECT ELECT ELECT	10MF 47MF 47MF 47MF 47MF	20% 20% 20% 20% 20%	25V 16V 16V 16V 50V
R208 1-249-431-11 R209 1-249-433-11 R210 1-249-431-11 R211 1-249-431-11 R212 1-249-433-11 R213 1-249-431-11	CARBON CARBON CARBON CARBON CARBON	15K 5% 22K 5% 15K 5% 100K 5% 22K 5% 15K 5%	1/4W 1/4W 1/4W 1/4W 1/4W		C1418 C1419 C1427	1-124-927-11 1-124-120-11 1-163-003-11 1-163-003-11 1-124-927-11	ELECT CERAMIC CHIP CERAMIC CHIP ELECT	330PF 4.7MF	20% 20% 10% 10% 20%	50V 16V 50V 50V
R214 1-249-431-11 R215 1-249-433-11 R216 1-249-433-11 R217 1-249-431-11 R218 1-249-417-11	CARBON CARBON CARBON CARBON CARBON CARBON	1K 5% 22K 5% 22K 5% 22K 5% 15K 5% 1K 5%	1/4W 1/4W 1/4W 1/4W 1/4W		C1428 C1429 C1430 C1431 C1432	1-124-477-11 1-163-005-11 1-163-005-11 1-124-927-11 1-124-927-11	ELECT CERAMIC CHIP CERAMIC CHIP ELECT ELECT		20% 10% 10% 20% 20%	16V 50V 50V 50V 50V
R219 1-249-429-11 R225 1-249-417-11 R226 1-249-417-11 R227 1-249-417-11 R228 1-249-417-11	CARBON CARBON CARBON CARBON	10K 5% 1K 5% 1K 5% 1K 5% 1K 5%	1/4W 1/4W 1/4W 1/4W 1/4W		C1436 C1437 C1439 C1440	1-163-009-11 1-163-009-11 1-124-477-11 1-163-005-11	CERAMIC CHIP CERAMIC CHIP ELECT CERAMIC CHIP	0.001MF 0.001MF 47MF 470PF	10% 10% 20% 10%	50V 50V 16V 50V
***************************************	*********			******	C1442 C1443 C1444 C1445	1-124-927-11 1-124-927-11 1-124-477-11 1-124-477-11	ELECT ELECT ELECT ELECT	4.7MF 4.7MF 47MF 47MF	20% 20% 20% 20% 20%	50V 50V 16V 16V
<cai C1431 1-126-105-11 C1432 1-126-105-11</cai 		1000MF 1000MF	20% 20%	35V 35V	C1447 C1448 C1449 C1450 C1451	1-123-875-11 1-124-477-11 1-124-477-11 1-124-589-11 1-123-875-11 1-163-005-11	ELECT ELECT ELECT ELECT ELECT CERAMIC CHIP	10MF 47MF 47MF 47MF 10MF	20% 20% 20% 20% 20%	50V 16V 16V 16V 50V
									~ ~	

J1

REF.NO.	PART NO.	DESCRIPTION			REMARK	REF.NO.	PART NO.	DESCRIPTION		REMARK
C1454 C1455	1-123-875-11 1-126-101-11 1-124-902-00 1-164-232-11 1-124-589-11	ELECT ELECT ELECT CERAMIC CHIP ELECT	10MF 100MF 0.47MF 0.01MF 47MF	20% 20% 20% 20%	50V 16V 50V 50V 16V	D1506 D1507 D1509	8-719-800-76 8-719-420-60 8-719-400-18 8-719-400-18	DIODE MA152WK		
C1459 C1460 C1461 C1469 C1479	1-124-589-11 1-126-103-11 1-164-232-11 1-163-005-11 1-124-589-11	ELECT ELECT CERAMIC CHIP CERAMIC CHIP ELECT		20% 20% 10% 20%	16V 16V 50V 50V 16V	IC1401	<1C>	1C CXA[114P		
C1480 C1481 C1501 C1502 C1503	1-106-367-00 1-106-367-00 1-123-875-11 1-123-875-11 1-108-614-11	MYLAR MYLAR ELECT ELECT MYLAR	0.01MF 0.01MF 10MF 10MF 0.001MF	10% 10% 20% 20% 10%	200V 200V 50V 50V 100V	IC1403 IC1404 IC1405	8-752-006-12 8-752-006-12 8-752-006-12 8-759-942-16	IC CX20061 IC CX20061 IC CX20061		
C1504 C1505 C1507 C1508 C1509	1-124-910-11 1-106-216-00 1-108-620-11 1-123-875-11 1-124-499-11	ELECT MYLAR MYLAR ELECT ELECT	47MF 0.068MF 0.0033MF 10MF 1MF	20% 10% 10% 20% 20%	50V 100V 100V 50V 50V	J45	*1-566-641-11	NECTOR> CONNECTOR, HINGE PLUG, CONNECTOR CONNECTOR, HINGE	5P (TAB) 181	
C1511 C1512 C1513 C1551 C1552	1-123-875-11 1-106-363-00 1-163-169-00 1-163-181-00 1-124-122-11	ELECT MYLAR CERAMIC CHIP CERAMIC CHIP ELECT	100PF 100MF	20% 10% 5% 5% 20%	50V 400V 50V 50V 50V	J132 J133	*1-564-519-11 *1-564-517-11	PLUG, CONNECTOR PLUG, CONNECTOR PLUG, CONNECTOR	2P	
C1553 C1561 C1562 C1563 C1564	1-163-007-11 1-123-875-11 1-123-875-11 1-123-875-11 1-123-875-11	CERAMIC CHIP ELECT ELECT ELECT ELECT	680PF 10MF 10MF 10MF 10MF	10% 20% 20% 20% 20%	50V 50V 50V 50V 50V	J1402 J1403 J1404	1-561-534-41 1-563-760-11 1-563-547-11	TERMINAL BOARD, SOCKET 21P JACK, MINIATUER JACK BLOCK, PIN	(DIA. 3.5)	
	<d10< td=""><td>DE></td><td></td><td></td><td></td><td>1</td><td></td><td>TERMINAL, S PIN JACK BLOCK 2</td><td>p</td><td></td></d10<>	DE>				1		TERMINAL, S PIN JACK BLOCK 2	p	
D1401 D1403 D1404 D1405 D1406	8-719-106-62 8-719-106-23 8-719-106-23 8-719-106-23 8-719-106-23	DIODE RD11M- DIODE RD7.5M DIODE RD7.5M DIODE RD7.5M DIODE RD7.5M	-B2 -B2 -B2			J1407	1-561-534-41 <coi< td=""><td>SOCKET 21P L></td><td></td><td></td></coi<>	SOCKET 21P L>		
D1407 D1408 D1409 D1410 D1415	8-719-106-62 8-719-106-44 8-719-106-44 8-719-106-44 8-719-106-23	DIODE RD11M- DIODE RD9.1M DIODE RD9.1M DIODE RD9.1M DIODE RD7.5M	-B2 -B2 -B2			L1402 L1403	1-412-043-11	INDUCTOR 1	AND OUH OUH OUH	
D1418 D1419	8-719-106-23 8-719-106-62	DIODE RD7.5M DIODE RD11M-					< T R A	NS1STOR>		
D1420 D1421 D1422	8-719-106-44 8-719-106-23 8-719-106-44	DIODE RD9.1M DIODE RD7.5M DIODE RD9.1M	-B2 -B2 -B2			Q1402 Q1403 Q1404	8-729-216-22 8-729-271-22 8-729-271-22	TRANSISTOR 2SA11 TRANSISTOR 2SA11 TRANSISTOR 2SC27 TRANSISTOR 2SC27 TRANSISTOR 2SC27	62 12-G 12-G	
D1423 D1424 D1425 D1426 D1427	8-719-106-23 8-719-106-23 8-719-106-23 8-719-106-23 8-719-106-44	DIODE RD7.5M DIODE RD7.5M DIODE RD7.5M DIODE RD7.5M DIODE RD9.1M	-B2 -B2 -B2			Q1405 Q1409 Q1410 Q1411 Q1412	8-729-271-22 8-729-271-22 8-729-271-22 8-729-271-22 8-729-271-22	TRANSISTOR 2SC27 TRANSISTOR 2SC27 TRANSISTOR 2SC27 TRANSISTOR 2SC27 TRANSISTOR 2SC27 TRANSISTOR 2SC27	12-G 12-G 12-G	
D1428 D1429 D1430 D1431 D1432	8-719-106-44 8-719-106-23 8-719-106-62 8-719-106-62 8-719-400-43	DIODE RD9.1M DIODE RD7.5M DIODE RD11M- DIODE RD11M- DIODE MA3051	-B2 B2 B2			Q1551	8-729-271-22 8-729-140-96	TRANSISTOR 2SC27 TRANSISTOR 2SD77	12-G	
D1435 D1436 D1437 D1501 D1502	8-719-106-23 8-719-106-23 8-719-106-23 8-719-400-18 8-719-400-18	DIODE RD7.5M DIODE RD7.5M DIODE RD7.5M DIODE MA152W DIODE MA152W	-B2 -B2 K			R1401 R1402 R1403 R1404	1-216-172-00 1-216-170-00 1-216-089-00	ISTOR> METAL GLAZE 82 METAL GLAZE 68 METAL GLAZE 47 METAL GLAZE 47	5% K 5% O 5%	1/8W 1/8W 1/10W 1/10W
	8-719-400-18					R1405		METAL GLAZE 10	Ř 5 %	1/10W

J1

REF.NO.	PART NO.	DESCRIPTION				REMARK	REF. NO.	PART NO.	DESCRIPTION			REMARK
R1408 R1409 R1410	1-216-113-00 1-216-049-00 1-216-041-00 1-216-049-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470K 1K 470 1K 470	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R1496 R1497 R1501	1-216-049-00 1-216-113-00 1-216-049-00 1-216-230-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1 K 470 K 1 K 22 K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/8W
R1413 R1414 R1415	1-216-089-00 1-216-113-00 1-216-089-00 1-216-047-00 1-216-047-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 470K 47K 820 820	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R1504 R1505 R1506	1-216-232-00 1-216-262-00 1-216-234-00 1-216-230-00 1-216-262-00 1-216-254-00	METAL GLAZE	27K 470K 33K 22K 470K 220K	5% 5% 5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W 1/8W
R1418 R1419 R1420 R1422	1-216-172-00 1-247-738-11 1-216-033-00 1-216-033-00 1-216-033-00	METAL GLAZE CARBON METAL GLAZE METAL GLAZE METAL GLAZE	82 82 220 220 220	5% 5% 5% 5%	1/8W 1/2W 1/10W 1/10W 1/10W		R1510 R1511 R1512 R1513 R1514	1-216-216-00 1-216-198-00 1-216-222-00 1-216-240-00 1-216-198-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	5.6K 1K 10K 56K 1K	5% 5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W
R1424 R1425 R1426 R1427	1-216-083-00 1-216-083-00 1-216-049-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	27K 27K 1K 1K 1K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R1517 R1518 R1519 R1520	1-216-228-00 1-216-182-00 1-216-222-00 1-216-250-00 1-216-262-00 1-216-214-00	METAL GLAZE	18K 220 10K 150K 470K 4.7K	5% 5%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%	1/8W 1/8W 1/8W 1/8W 1/8W 1/8W
R1434	1-216-113-00 1-216-113-00 1-216-043-00 1-216-172-00 1-216-073-00 1-216-033-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470K 470K 560 82 10K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/8W 1/10W		R1522 R1552 R1553 R1554	1-216-296-00 1-216-230-00 1-216-434-11 1-216-186-00 1-216-216-00	METAL GLAZE METAL GLAZE METAL OXIDE METAL GLAZE	0 22K 1.8K 330 5.6K	5% 5% 5% 5%	1/8W 1/8W 1W F 1/8W 1/8W
R1441 R1442 R1443	1-216-083-00 1-216-083-00 1-216-083-00 1-216-033-00 1-216-095-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	220 27K 27K 220 220 220	5%%%% 55555555555555555555555555555555	1/10W 1/10W 1/10W 1/10W 1/10W		R1558 R1559 R1560 R1561	1-216-296-00 1-216-246-00 1-216-278-00 1-216-103-00 1-216-097-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 100K 2.2M 180K 100K		1/8W 1/8W 1/8W 1/10W 1/10W
R1447 R1448 R1452	1-216-033-00 1-216-033-00 1-216-039-00 1-216-039-00 1-216-083-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	220 220 390 390 390	5% 5% 5%	1/10W 1/10W 1/10W 1/10W		R1563 R1564 R1565 R1566	1-216-057-00 1-216-103-00 1-216-097-00 1-216-057-00 1-216-103-00	METAL GLAZE	2.2K 180K 100K 2.2K 180K		1/10W 1/10W 1/10W 1/10W 1/10W
R1455 R1460 R1461 R1462	1-216-033-00 1-249-393-11 1-216-057-00 1-216-083-00 1-216-103-00	METAL GLAZE CARBON METAL GLAZE METAL GLAZE	220 10 2.2K 27K	5% 5% 5% 5%	1/10W 1/4W 1/10W 1/10W	F	R1568 R1569 R1570 R1571	1-216-097-00 1-216-057-00 1-216-103-00 1-216-097-00 1-216-057-00	METAL GLAZE	100K 2.2K 180K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R1464 R1465 R1466 R1467	1-216-097-00 1-216-049-00 1-216-113-00 1-216-089-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	100K 1K 470K 47K	5%	1/10W 1/10W 1/10W 1/10W		R1801 R1802 R1803 R1804 R1805	1-216-295-00 1-216-295-00 1-216-296-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE			1/10W 1/10W 1/8W 1/10W 1/10W
R1470 R1471 R1472 R1473	1-216-097-00 1-216-049-00 1-216-113-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 180K 100K 1K 470K	5%%%% 5555 5555 558	1/10W 1/10W 1/10W 1/10W		R1806 R1807 R1808 R1809 R1810	1-216-295-00 1-216-295-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0	5% 5% 5% 5% 5%	1/10W 1/10W 1/8W 1/8W 1/8W
R1474 R1475 R1476 R1477 R1478 R1479	1-216-170-00 1-216-049-00 1-216-033-00 1-216-089-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	68 1K 220 47K 2.2K	5%% 5%% 5%% 5%% 5%%	1/8W 1/10W 1/10W 1/10W		R1811 R1812 R1813 R1814 R1815	1-216-295-00 1-216-296-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0	5% 5% 5% 5%	1/10W 1/8W 1/10W 1/10W 1/10W
R1482 R1489 R1490 R1491	1-216-041-00 1-216-172-00 1-216-085-00 1-216-083-00 1-216-172-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470 82 33K 27K	5% 5% 5%	1/10W 1/8W 1/10W 1/10W		R1816 R1817 R1818 R1819 R1820	1-216-295-00 1-216-296-00 1-216-296-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0 0	5% 5% 5% 5%	1/10W 1/8W 1/8W 1/10W 1/10W
R1492 R1493 R1494	1-216-172-00 1-216-033-00 1-216-113-00	METAL GLAZE METAL GLAZE METAL GLAZE	82 220 470K	5% 5% 5% 5%	1/8W 1/10W 1/10W		R1821 R1822	1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE	0	5% 5%	1/10W 1/10W

J1

REF.NO. PART NO.	DESCRIPTION	REMARK
R1823 1-216-295- R1824 1-216-296- R1825 1-216-295- R1826 1-216-295- R1827 1-216-295-	0 METAL GLAZE 0 5% 1/8W 0 METAL GLAZE 0 5% 1/10W 0 METAL GLAZE 0 5% 1/10W	
R1828 1-216-295- R1829 1-216-295- R1830 1-216-295- R1831 1-216-296- R1832 1-216-295-	O METAL GLAZE O 5% 1/10W O METAL GLAZE O 5% 1/10W O METAL GLAZE O 5% 1/8W	
<	ARIABLE RESISTOR>	
RV1501 1-238-023- RV1502 1-238-016- RV1503 1-238-017- RV1504 1-238-013- RV1505 1-238-023-	1 RES, ADJ, CARBON 10K 1 RES, ADJ, CARBON 22K 1 RES, ADJ, CARBON 2.2K	
RV1506 1-238-017- RV1507 1-238-009- RV1508 1-238-016- RV1509 1-238-023-	1 RES, ADJ, CARBON 220 1 RES, ADJ, CARBON 10K	
**********	**********************	******

MISCELLANEOUS

A.1-426-398-11 COIL, DEMAGNETIZATION
A.1-451-313-22 DEFLECTION YOKE (Y29FXA)
1-452-032-00 MAGNET, DISK: 10MM
1-452-094-00 MAGNET, ROTATABLE DISK: 15MM
A.1-452-509-12 NECK ASSY, PICTURE TUBE (NA-308)

▲.1-574-299-11 CORD, POWER (WITH CONNECTOR)

V901 A. 8-733-823-05 PICTURE TUBE (A68JYK60X)

ACCESSORIES AND PACKING MATERIALS

PART NO.	DESCRIPTION
1-551-475-31 1-551-734-11 1-568-736-11 3-750-583-51 *4-384-027-01	CABLE ASSY CORD, CONNECTION (RK-74A) CONNECTOR, CONVERSION MANUAL, INSTRUCTION BAG, PROTECTION
*4-390-743-01 *4-390-744-01 *4-390-749-01	CUSHION (UPPER) (ASSY) CUSHION (LOWER) (ASSY) INDIVIDUAL CARTON

The components identified by shading and mark \triangle are critical for safety.

Replace only with part number specified.

REMARK